

GG

EF

SERVICE MANUAL



GASGAS

Foreword

GAS GAS thank you for your confidence

By choosing the new GAS GAS EC 125/ 200/ 250/ 300 you have just entered the great GAS GAS family and, as a user of the number one off-road motorbike manufacturer, you deserve the distinguished treatment that we wish to offer to you both in our after-sale relationship and in the explanations that we provide in this manual.

Our EC 125/ 200/ 250/ 300 is a bike conceived for the practice of high-competition enduro. It is actually the fruit of many years of competition and experimentation in this demanding discipline, as well as the many great successes achieved thanks to great trial riders who have contributed with their expertise to the basic data that have allowed us to create a high-level motorbike.

Congratulations for making the right choice. With your skills at the commands of this motorbike, an adequate preparation and the indispensable servicing for this GAS GAS to be highly reliable, you will be able to enjoy the most comfortable and rewarding enduro practice.

Thanks for your confidence and welcome to GAS GAS Motos.

February 2003

COMMON NOTICE

Whenever you see the symbols shown below, heed their instructions!
Always follow safe operating and maintenance practices.

WARNING

This warning symbol identifies special instructions or procedures which, if not correctly followed, could result in personal injury, or loss of life.

CAUTION

This caution symbol identifies special instructions or procedures which, if not strictly observed, could result in damage to or destruction of equipment.

NOTE

This note symbol indicates points of particular interest for more efficient and convenient operation.

However, if improperly conducted, the sport has the potential to cause environmental problems as well as conflicts with other people. Responsible use of your off-road motorcycle will ensure that these problems and conflicts do not occur.

TO PROTECT THE FUTURE OF YOUR SPORT, MAKE SURE YOU USE YOUR BIKE LEGALLY, SHOW CONCERN FOR THE ENVIRONMENT, AND RESPECT THE RIGHTS OF OTHER PEOPLE.

Off-road motorcycle riding is a wonderful sport, and we hope you will enjoy it to the fullest.

TABLE OF CONTENTS

| | | | |
|-------------------------------|----|---|-----|
| Foreword | 64 | Clutch | 85 |
| Common notice | 65 | Silencer packing change | 85 |
| Table of contents | 66 | Drive chain | 86 |
| Specifications | 67 | Handlebar | 88 |
| Location of Components | 69 | Brakes | 89 |
| Side Stand | 71 | Steering | 90 |
| Fuel | 71 | Steering blocade | 91 |
| Serial number | 73 | Front fork | 92 |
| Starting the engine | 73 | Rear suspension | 95 |
| Shifting gears | 74 | Wheel | 97 |
| Stopping the motorcycle | 75 | Cleaning | 98 |
| Table of maintenance | 76 | Bolt and nut tightening | 99 |
| Ignition timing | 78 | Lubrication | 101 |
| Cooling system | 78 | Tunning (Carburetor and suspension) | 102 |
| Spark plug | 81 | Preparation check | 111 |
| Transmission | 81 | Storage | 112 |
| Air cleaner | 83 | Gas Gas speedo instructions | 112 |
| Throttle cable | 84 | Troubleshooting | 114 |
| Carburetor | 84 | Warranty regulations | 118 |

SPECIFICATIONS

ENGINE

Engine 125 cc.
Bore and stroke
Displacement in cubic centimeters

2 cycle, single cylinder, crank case induction, liquid cooled

54 x 54.5 mm.
124 cc.

Engine 200 cc.
Bore and stroke
Displacement in cubic centimeters

62.5 x 65 mm.
199,4 cc.

Engine 250 cc.
Bore and stroke
Displacement in cubic centimeters

66.4 x 72 mm.
249,3 cc.

Engine 300 cc.
Bore and stroke
Displacement in cubic centimeters

72 x 72 mm.
294,7 cc.

Type

Carburetor
Lubrication system
Starting system
Ignition system
Ignition timing
Spark plug

KEIHIN PWK 38
Fuel premix (ratio) (50:1)(2%)
Kick start pedal
CDI system.
1 mm APMS.
NGK BR8EG

TRANSMISSION

Transmission type
Clutch type
Driving system
Gear Ratio


6 speed
Multidisc in oil bath, hydraulic actuation
Chain
1^a 2.071(29/14)
2^a 1.625(26/16)
3^a 1.333(24/18)
4^a 1.100(22/20)
5^a 0.913(21/23)
6^a 0.791(19/24)
2.85 (57/20)
3.692 (48/13)
8.149 (6th gear)

Primary reduction ratio
Final reduction ratio
Overall drive ratio


| | | |
|-------------------------|-------------|---|
| Transmission oil | Capacity | 1800 cc. |
| | Type | 5W50 API SF o SG |
| CHASSIS | | |
| Type | | Chromolly tubular semi double cradle |
| Tires | Front | 80/100 x 21 |
| | Rear | 120/90 x 18 |
| Suspension | Front | Upside-down telescopic ø 43mm WP fork. Upside-down telescopic ø 45mm Marzocchi fork. |
| | Rear | Progressive system with single shock, multi adjustable, ÖHLINS |
| Suspension stroke | Front | 282 mm. |
| | Rear | 320 mm. |
| Front fork oil (each) | | Marzocchi SAE 7,5 WP SAE 5 ÖHLINS SAE 5 - 7,5 |
| Front fork oil level | | Marzocchi: 110 mm (compressed with spring removed). WP: 120 mm (compressed with spring removed). ÖHLINS: 110 mm (compressed with spring removed). |
| BRAKES | | |
| Type | Front, rear | Disc brake |
| Effective disc diameter | Front | 260 mm. |
| | Rear | 220 mm. |
| DIMENSIONS | | |
| Overall length | | 2135 mm. |
| Overall width | | 810 mm. |
| Overall height | | 1260 mm. |
| Wheel base | | 1475 mm. |
| Ground clearance | | 340 mm. |
| Fuel tank capacity | | 9,5 Litre (2,5 gallons u.s.) |
| Height seat | | 940 mm. |

(Specifications are subject to change without notice and are not applicable in some countries).

Location of components
GAS GAS EC 2003 cc.

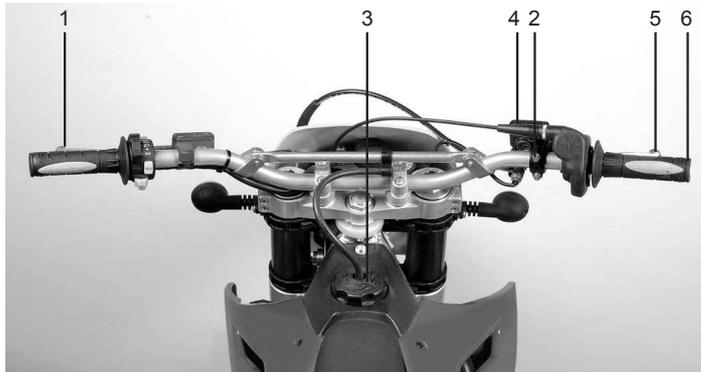

- 1- Clutch lever
- 2- Engine Stop Button
- 3- Fuel Tank Fill Cap
- 4- Front Brake Fluid Reservoir
- 5- Front Brake lever
- 6- Throttle Twist-Grip

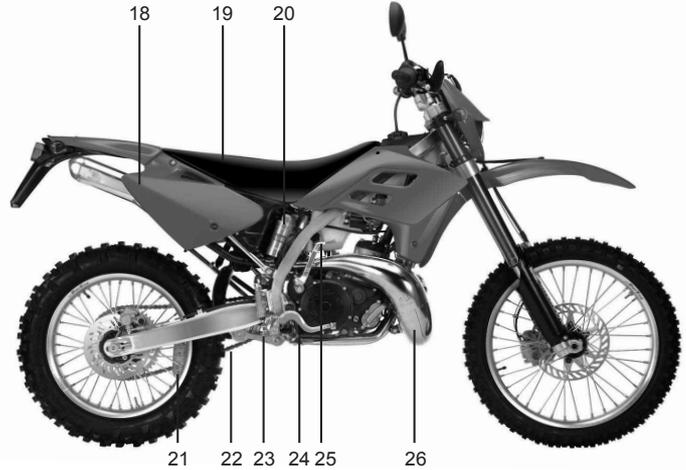

- 7- Brake Disc, front
- 8- Front Suspension
- 9- Brake fluid reservoir, rear
- 10- Fuel Tank
- 11- Carburetor
- 12- Rear shock absorber
- 13- Brake Caliper, front
- 14- Radiator
- 15- Fuel Tap
- 16- Shift pedal

- 17- Air Cleaner
- 18- Silencer
- 19- Seat
- 20- Nitrogen Reservoir
- 21- Chain Guide
- 22- Drive chain
- 23- Rear Suspension Linkage
- 24- Rear Brake Pedal
- 25- Kick Start Pedal
- 26- Exhaust Expansion Chamber

SIDE STAND

To operate the side stand:

Release the security strap (B), the sidestand is held in the down position by the weight of the motorcycle. The sidestand automatically retracts when the motorcycle is placed in the upright position.



- (A). Side Stand
- (B). Sidestand spring
- (C). Security strap

NOTE

Do not start the engine or ride the motorcycle when the side stand is down. Always engage the security strap (B) before operation of the motorcycle.

FUEL

The GAS GAS FSE 400 cc has a four stroke engine and requires 95 octane, unleaded gasoline

| Gas Tank Capacity | |
|-------------------|------|
| ENDUCROSS FSE | 9,5L |



- (A). Fuel Cap.
- (B). Fuel Vent hose.

Position the vent hose clip in a position which prevents spillage on the steering bearings and the clock.

RECOMENDED FUEL

Use premium gasoline with an octane rating equal to or higher than that shown in the table.

| OCTANE RATING METHOD | MINIUM RATING |
|-----------------------------|---------------|
| Antiknock Index (RON+MON)/2 | 90 |
| Research Octane No. (RON) | 98 |

NOTE

If "knocking" or "pinging" occurs, try a different brand of gasoline or higher octane grade.

WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Always stop the engine and do not smoke. Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

Engine Oil Mixing

Oil must be mixed with the gasoline to lubricate the piston, cylinder, crankshaft, bearings, and connecting rod bearings.

| |
|---|
| <p>Recommended Oil: OIL 2T SINTETIC</p> |
|---|

NOTE

If recommended oil is not available, use only synthetic oil designed for use in racing 2 cycle engines.

Proporción of gasoline and oil mixture (premix ratio)(50 parts gasoline to 1 part oil).

CAUTION

Do not mix vegetable and mineral based oils.
Too much oil will cause excessive smoking and spark plug fouling.
Too little oil will cause engine damage or premature wear.

To make an gasoline-oil mixture, pour oil and half of the gasoline into a container first and stir the mixture thoroughly. Then add the rest of the gasoline and stir the mixture well.

NOTE


At low temperature, oil will not easily mix with gasoline. Take time to ensure a well-blended mixture.
The lubricative quality of this mixture deteriorates rapidly; use a fresh mixture for each day of operation.

SERIAL NUMBER

This number allows the motorcycle to be registered. The serial number (or V.I.N.) is located on the steering stem of the frame.


Official approval plate

This motorcycle has an official approval plate. It shows the serial number.

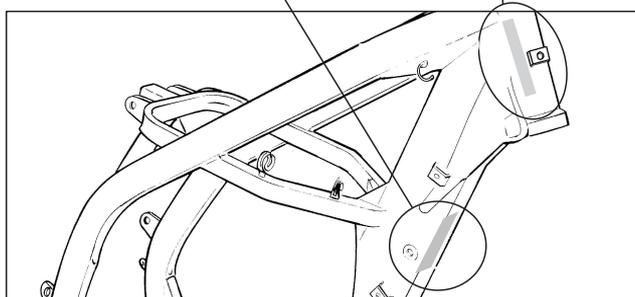

START THE ENGINE


1. You have to assure the motorcycle to the neutral position.
2. Turn right the key of fuel tank (A).

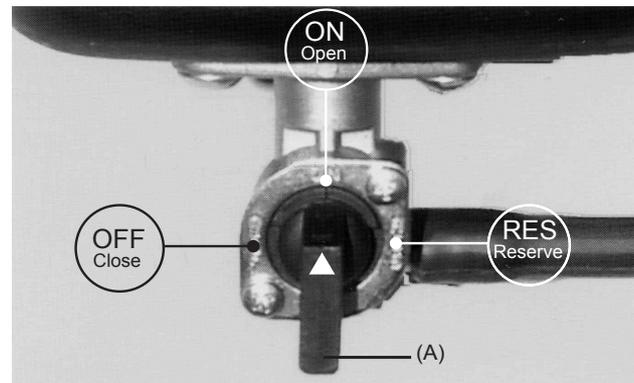

3. If the engine is cold, pull up the choke knob (B).

NOTE

- When the engine is already warm or on hot days, open the throttle part way instead of using the choke knob.
- If the engine is flooded, kick with the throttle fully open.
- If the clutch lever is pulled, the motorcycle can be started while in any gear.

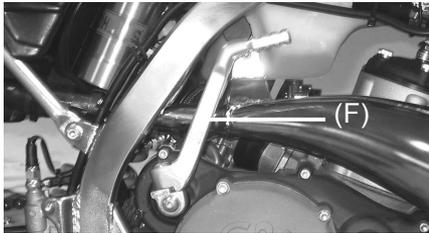


4. Start the motorcycle with kick start pedal (F).

5. Even after the engine starts, keep the choke knob pulled up. Until the engine is thoroughly warmed up.

Stopping the engine

1. Change to the neutral position.

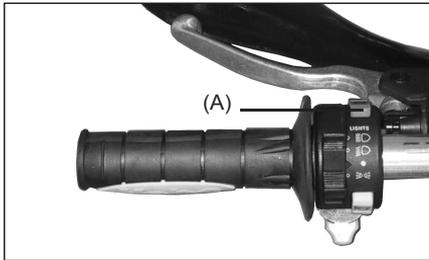

2. After racing the engine slightly, close the throttle completely and push the engine stop button (A).

3. Turn the key in the unlock direction (position in "OFF" (C)).


SHIFTING GEARS

The transmission is a 6 speed, return shift type with neutral halfway between 1st and 2nd gears. A "return shift" means that to go back to first gear from a higher gear, you must shift back through the gears one by one. The same is true when upshifting: each gear must be engaged before the next higher gear may be selected.

To engage first gear from neutral, pull in the clutch lever and push down on the shift pedal, gently release the clutch lever, then release the shift pedal.

CAUTION


When changing gears, press firmly on the shift pedal to ensure complete, positive shifting. Careless, incomplete shifts can cause the transmission to jump out of gear and lead to engine damage.

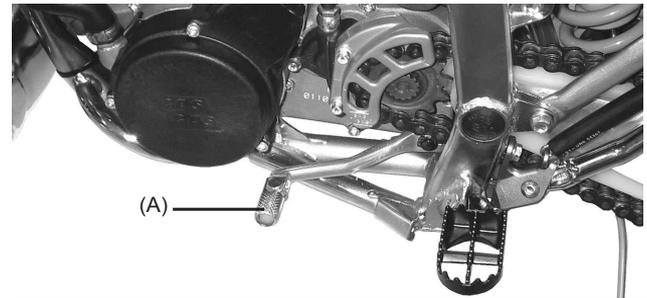

(A). Shift pedal.

STOPPING THE MOTORCYCLE

For maximum deceleration, close the throttle (A) and apply both front and rear brakes. Disengage the clutch as the motorcycle comes to a stop. Independent use of the front or rear brake may be advantageous under certain conditions. Downshift progressively as speed is reduced to ensure good engine response when you want to accelerate.

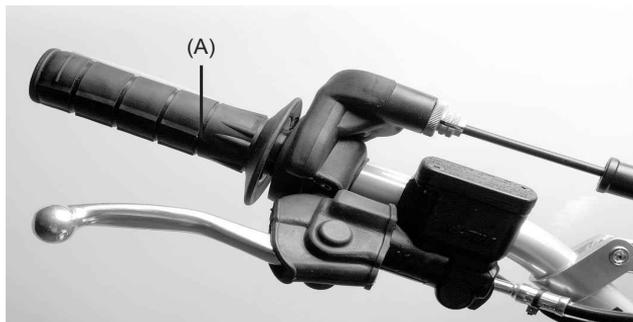

BREAK-IN

Para obtener un óptimo funcionamiento del motor y la transmisión, es necesario una suave ejecución, teniendo que llevarse a cabo un rodaje previo. Para la primera hora o 20 Km. de la operación, rodar el motor a una baja y moderada velocidad y r/min.

NOTE

The slow riding necessary during the break-in period may cause carbon to build up on the spark plug and foul it. If inspection of the spark plug shows this to be the case, replace the standard spark plug with a hotter spark plug for the duration of the break-in period.

| SPARK PLUG | |
|---------------|-------------|
| Standard Plug | Hotter Plug |
| NGK BR8EG | |

1. Start the engine and let it run at idle until the engine is thoroughly warmed up.
2. Stop and let the engine cool completely.
3. Start the engine and ride for 10 minutes at moderate speed - NEVER ACCELERATE HARD.
4. Stop and let the engine cool completely. Be sure to check and adjust chain slack and spoke tightness and make a general inspection.
5. Start the engine and ride for 20 minutes at moderate speed. - NEVER ACCELERATE HARD.
6. Stop and let the engine cool completely. Check and adjust as step (look maintenance and adjustment table).
7. Install the parts removed.
8. Fill the radiator up to the bottom of the radiator filler, bleed the air from the cooling system.
9. Start the engine and ride for 30 minutes at moderate speed - NEVER ACCELERATE HARD.
10. Stop and let the engine cool completely, check and adjust.
11. After the break-in procedure has been properly carried out, the motorcycle is ready for regular operation. However, since recklessly high r/min (rpm) will lead to engine trouble, take care to use the necessary skill and technique in operating the motorcycle.

CAUTION

However, since recklessly high r/min (rpm) will lead to engine trouble, take care to use the necessary skill and technique in operating the motorcycle.

NOTE

After break-in, install a new standard spark plug, and change the transmission oil.

| MAINTENANCE AND ADJUSTMENT | | | | | |
|--------------------------------------|-----------------|-----------|------------------|---------|--------------------|
| Part | Check / inspect | Adjust | Replace / Change | Clean | Grease / Lubricate |
| Clutch | Each race | Each race | Each race* | - | Each race |
| Friction plates | 3 races | 3 races* | 3 races* | - | - |
| Throttle cable | - | Each race | - | - | - |
| Spark plug | - | - | - | 1 race | - |
| Air cleaner element | - | - | If it's damaged | 1 race | - |
| Carburetor | Each race | Each race | - | - | - |
| Transmission oil | - | - | 3 races | - | - |
| Piston and piston ring | 3 races | 3 races* | 3 races* | 3 races | - |
| Cylinder head, cyl. & exhaust valves | 3 races | 3 races* | 3 races* | - | - |
| Muffler | Each race | 1 race* | 1 race* | 1 race | - |
| Silencer packing | - | 10 races* | 10 races | - | - |
| Small end bearing | 3 races | 3 races* | 10 races | - | 3 races |
| Kick pedal and shift pedal | - | - | - | - | 1 race |
| Exhaust pipe o'ring | - | - | 3 races | - | - |
| Engine bearings check | 10 races | 10 races* | 10 races* | - | - |
| Coolant | 3 races | 3 races* | 3 races* | - | - |
| Radiator hoses, connections | Each race | 1 race* | 1 race* | - | - |
| Brake adjustment | 3 races | 3 races* | 3 races* | - | - |
| Brake wear | 5 races | 5 races* | 5 races* | - | - |
| Brake fluid level | 3 races | 3 races* | 3 races* | - | - |
| Brake fluid | - | - | Every 2 years | - | - |
| Brake master cyl. cup & dust seat | - | - | Every 2 years | - | - |

The maintenance and adjustments outlined in this chapter are easily carried out and must be done in accordance with the Periodic Maintenance Chart to keep the motorcycle in good running condition.

NOTA: (*) Inspect and do this operations only if it is necessary.

MAINTENANCE AND ADJUSTMENT

| Part | Check / inspect | Adjust | Replace / Change | Clean | Grease / Lubricate |
|---------------------------------------|-----------------|-----------------|------------------|-------------------|--------------------|
| Brake caliper pisto seal & dust seal | - | - | Every 2 years | - | - |
| Brake hose and pipe | - | - | Every 4 years | - | - |
| Spoke tightness and rim runout | 1 race | 1 race* | 1 race* | - | - |
| Lubricate drive chain | - | - | - | - | 1 race |
| Drive chain | 1 race | - | - | - | - |
| Drivechain wear | - | 5 races | 5 races | - | - |
| Chain slider | 5 races | 5 races* | 5 races* | - | - |
| Front fork | 1 race | If it's damaged | If it's damaged | If it's damaged | - |
| Front fork oil | - | - | Each year | - | - |
| Nuts, bolt, fasteners | 5 races | 5 depósitos* | 5 races* | - | - |
| Fuel hose | 7 races | 7 depósitos* | 7 races | - | - |
| Fuel system | - | - | 10 races | If it's necessary | - |
| Steering play | 1 race | - | - | - | - |
| Rear sprocket | 5 races | 5 depósitos* | 5 races* | - | - |
| General lubrication | 5 races | - | - | - | 5 races |
| Steering bearing | - | - | - | - | 10 races |
| Wheel bearing | 10 races | 10 depósitos* | 10 races* | - | - |
| Swing arm and uni-trak linkage pivots | 5 races | 5 depósitos* | 5 races* | - | 5 races |
| Rear chock oil | Every 2 years | 2 years* | 2 years* | - | - |

The maintenance and adjustments outlined in this chapter are easily carried out and must be done in accordance with the Periodic Maintenance Chart to keep the motorcycle in good running condition.


NOTA: (*) Inspect and do this operations only if it is necessary.

IGNITION TIMING


Because a capacitor discharge ignition (CDI) system is used on this motorcycle, the ignition timing should never require adjustment unless the magneto stator is incorrectly installed during engine reassembly. However, if there is any doubt as to the timing, inspect and adjust, if necessary, as follows:

Ignition Timing Adjustment

- Remove the magneto cover (A).
- Check to see if the center mark of the three marks on the magneto stator (C) is aligned with the mark on the crankcase (B).

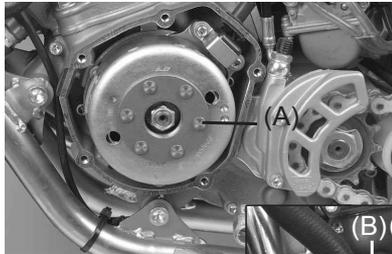

125 cc.

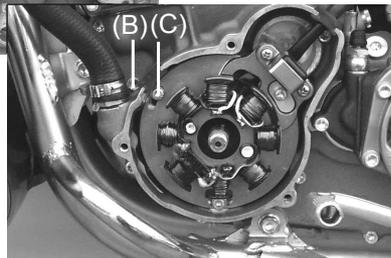

200/250/300 cc.

- If the marks are not aligned, loosen the magneto stator screws and turn the magneto stator.
- Tighten the screws securely.
- Install the magneto cover.

NOTE

The ignition timing can be adjusted for different power and to suit the rider's preference and ability.

- Remove the magneto cover.
- Loosen the stator screws.
- Adjust the timing by shifting the stator position within the three lines.

NOTE

For the best engine performance, it is very important to adjust the ignition timing within the adjustable range just explained.

- Tighten the stator screws securely.
- Install the magneto cover.
- Test ride the motorcycle and readjust the ignition timing if necessary.

COOLING SYSTEM

Radiator Hoses

Check the radiator hoses for cracks or deterioration, and connections for looseness in accordance with the Periodic Maintenance Chart.

Radiator

Check the radiator fins for obstruction by insects or mud. Clean off any obstructions with a stream of lowpressure water.

CAUTION

Using high-pressure water, as from a car wash facility, could damage the radiator fins and impair the radiator's effectiveness. Do not obstruct or deflect airflow through the radiator by installing unauthorized accessories in front of the radiator. Interference with the radiator airflow can lead to overheating and consequent engine damage.

Coolant information

To protect the cooling system aluminum parts (engine and radiator) from rust and corrosion, the use for corrosion and rust inhibitor chemicals in the coolant is essential. If coolant containing corrosion and rust inhibitor chemicals is not used, over a period of time, the cooling system accumulates rust and scale in the water jacket and radiator. This will clog coolant passages, and reduce the efficiency of the cooling system.

CAUTION

Use of incorrect coolant solutions will cause severe engine and cooling system damage. Use coolant containing corrosion inhibitors made specifically for aluminum engines and radiators in accordance with the instructions of the manufacturer.

WARNING

Coolant chemicals are harmful to the human body. Follow coolant manufacturer warnings and coolant handling instructions.

CAUTION

Soft or distilled water must be used with the inhibitor chemicals and the antifreeze (see below for antifreeze) in the cooling system. If hard water is used in the system, it causes scale accumulation in the water passages, and considerably reduces the efficiency of the cooling system.

If the lowest ambient temperature encountered falls below the freezing point of water, protect the cooling system against engine and radiator freeze-up.

Use a permanent type of anti-freeze (soft water and ethylene glycol plus corrosion and rust inhibitor chemicals for aluminium engines and radiators) in the cooling system. For the coolant mixture ratio under extreme conditions, choose the mixture ratio listed on the container for the lowest ambient temperature.

CAUTION

Permanent types of antifreeze on the market have anticorrosion and anti-rust properties. When it is diluted excessively, it loses its antifreeze and anticorrosion properties. Dilute a permanent type of antifreeze in accordance with the instructions of manufacturer.

Coolant

Coolant absorbs excessive heat from the engine and transfers it to the air at the radiator. If the coolant level becomes low, the engine overheats and may suffer severe damage. Check the coolant level each day before riding the motorcycle. Replenish coolant if the level is low.

WARNING

Para evitar quemaduras, no saque el tapón del radiador o trate de cambiar el líquido cuando el motor esté todavía caliente. Espere hasta que se enfríe.

Coolant level


- Situate the motorcycle so that it is perpendicular to the ground.
- Remove the radiator (A) cap in two steps. First turn the cap counterclockwise to the first stop and wait there for a few seconds. Then push and turn it further in the same direction and remove the cap.



NOTE

Check the level when the engine is cold.

- Check the coolant level in the radiator. The coolant level should be to the bottom of the radiator filler neck. (see illustration).
- If the coolant level is low, add the correct amount of coolant through the filler opening.

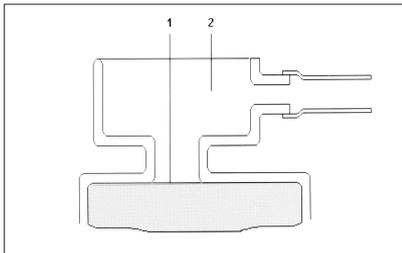

(1). Coolant level.
(2). Breather Hose.

Recommended coolant

Permanent type of antifreeze (soft water and ethylene glycol plus corrosion and rust inhibitor chemicals for aluminum engines and radiators).

NOTE


A permanent type of antifreeze is installed in the cooling system when shipped. It is colored green, contains a 50% solution of ethylene glycol, and has a freezing point of -35° C. (-32° F)(USA).

Water and coolant mixture ratio
1:1 (Water 50%, coolant 50%).
Total amount: 1,1 L.

Coolant Change

The coolant should be changed periodically to ensure long engine life.

- Wait for the engine to cool completely.
- Situate the motorcycle so that it is perpendicular to the ground.
- Remove the radiator cap.
- Place a container under the coolant drain plug, and drain the coolant from the radiator and engine by removing the drain plug at the bottom of the water pump cover. Immediately wipe or wash off any coolant that spills on the frame, engine, or wheels.

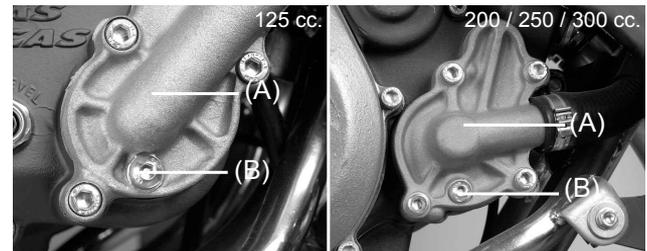

WARNING

Coolant on tires will make them slippery and can cause an accident and injury.

- Visually inspect the old coolant. If whitish cotton-like wafts are observed, aluminum parts in the cooling system are corroded. If the coolant is brown, iron or steel parts are rusting. In either case, flush the cooling system.
- Check the cooling system for damage, loose joints, or leaks.
- Install the water pump cover drain plug and cylinder drain plug with the specified torques shown in the table. Always replace the gasket with a new one, if it damaged.

Drain plug tightening torque (look maintenance table)
Water Pump Cover Plug: 9 Nm.

- Fill the radiator up to the bottom of the radiator filler neck with coolant, and install the radiator cap.
- Check the cooling system for leaks.
- Start the engine, warm up the engine throughly, then stop the engine.
- Check the coolant level after the engine cools down. Add coolant up to the bottom of the radiator filler neck.

SPARK PLUG

The standard spark plug is a shown in the table.
Spark plug should have a specified gap, and be tightened to 27 N-m. (20FT.LBS).

Standard Spark Plug

NGK CR8 E o DENSO U24ESR-N 0.7-0.8 mm.

The spark plug should be taken out periodically to check its gap and ceramic insulator. If the plug is oily or has carbon build up on it, clean it (preferably with a sandblaster) and then clean off any abrasive particles. The plug may also be cleaned using a high flash-point solvent and a wire brush or other suitable tool. Measure the gap with a wire-type thickness gauge, and adjust the gap, if incorrect, by bending the outer electrode. If the spark plug electrodes are corroded or damaged, or if insulator is cracked, replace the plug.

NOTE

Inspect every 30 hours and replace every 60 hours.

To find out whether the right temperature plug is being used, pull it out and examine the ceramic insulator around the center electrode. If the ceramic is light brown, the spark plug is correctly matched to engine temperature. If the ceramic is burned whit, the plug should be replaced with the next colder plug. If the ceramic is black, the plug should be replaced with the next hotter plug.

NOTE

If the engine performance drops, replace the spark plug first to regain performance.

TRANSMISSION

For the transmission and clutch to function properly, maintain the oil level at the proper level. Change the oil periodically. Oil at an insufficient level deteriorates and contaminates rapidly. This accelerates wear and promotes premature failures.


Oil level

- Stand the motorcycle upright and level allow a few minutes for the oil to settle.



- Observe the oil level at the window (A) on the lower right side of the engine case.

- The maximum and minimum level of oil is this window.

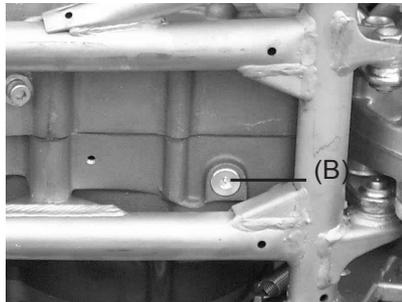

- If the lever is higher, you have to empty the leftover oil by the oil drain plug (B).


- By another way, if the oil level is smaller, fill up opening the fill plug (C). Use the same oil type than you had.

Transmission oil type


Viscosity: SAE 10W30.
Capacity: 1000 cc.

Oil Change

- The transmission oil should be changed periodically to assure long engine life.
- Warm the engine (over 5 minutes) to suspend the sediment, liquify the impurities, and facilitate removal.
- Stop the engine, and place an oil pan beneath the engine.
- Remove the drain plug and position the vehicle so that it is perpendicular to the ground to allow all the oil to drain out.
- Install the drain plug with its gasket, tightening it to 20-Nm.
- Remove the oil filler opening plug of fresh transmission oil (C). EC 200/ 250/ 300 remove with 900 cc and EC 125 with 650 cc.
- Check the oil level, after kicking the kick pedal 3 or 4 times.
- Install the oil filler opening plug.

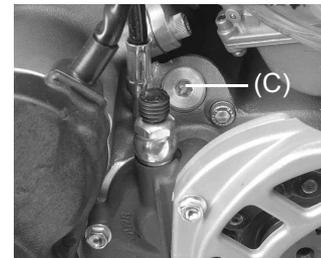

200/250/300 cc.

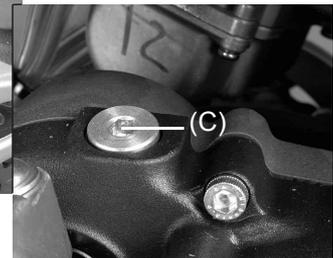

125 cc.

AIR CLEANER

A clogged air cleaner restricts the engine's air intake, increasing fuel consumption, reducing engine power, and causing spark plug fouling.

WARNING

A clogged air cleaner may allow dirt and dust to enter the carburetor and stick the throttle open. This could cause an accident.

CAUTION


A clogged air cleaner may allow dirt and dust to enter the engine causing excessive wear and possible engine damage.

Inspect the element, without fail, before and after each racing or practice session. Clean it if necessary.

Element Cleaning

WARNING

Clean the element in a well-ventilated area, and take care that there are no sparks or flame anywhere near the working area; this includes any appliance with a pilot light. Do not use gasoline or a low flash-point solvent to clean the element. A fire or explosion could result.

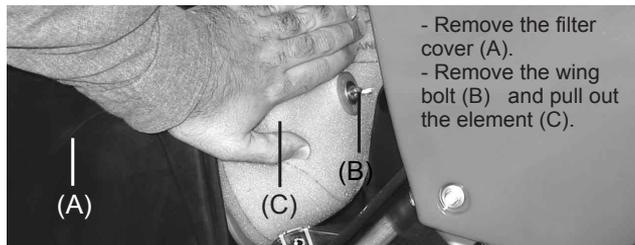


- Stuff a clean, lint-free towel into the carburetor so no dirt is allowed to enter the carburetor.


CAUTION

Do not spin the filter on its cage. It is possible to tear or damage the filter.

- Wipe out the inside of the air cleaner housing with a clean damp towel.

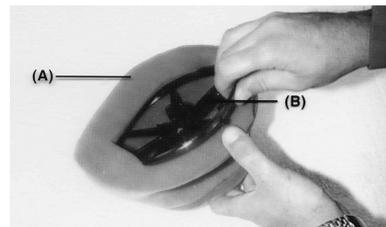


- Clean the element in a bath of a filter cleaning fluid using a soft bristle brush.

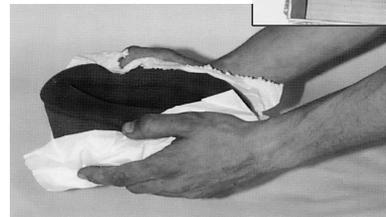

- Squeeze it dry in a clean towel. Do not wring the element or blow it dry; the element can be damaged.

- Inspect the element for damage such as tears, hardening, or shrinkage. If damaged, replace it or it will allow dirt into the carburetor.
- Apply grease to all connections and screw hole in the air cleaner housing and intake tract.

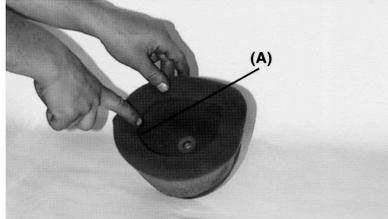


- Install the element in the machine (A), and make sure the sealing surface of the element is seated properly.

- Install the seat.

THROTTLE CABLE

- Inspect the throttle grip for smooth operation in all steering positions. In accordance with the Periodic Maintenance Chart, check and adjust the throttle cable.
- . Check that the throttle grip has 2-3 mm of play and turns smoothly.
- . If the play is incorrect, loosen the locknut on the upper end of the throttle cable, and turn the adjuster to obtain the correct amount of play. Tighten the locknut.

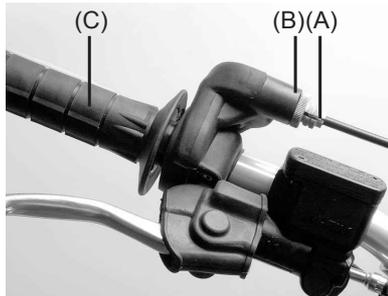

(A). Adjuster.
 (B). Locknut.
 (C). Throttle grip.

- If the free play cannot be set by adjusting the upper cable adjuster, pull the rubber boot off of the carburetor top. Make the necessary free play adjustment at the lower cable adjuster, tighten the locknut, and reinstall the rubber boot.

CARBURETOR

Idling Adjustment

Idling adjustment is carried out using the air screw (A) and idle adjusting screw (B).

- First turn in the air screw until it seats lightly, and back it out 1 1/2 turns.
- After thoroughly warming up the engine, turn the idle adjusting screw to obtain the desired idle speed. If no idle is preferred, turn out the screw until the engine stops.



- Open and close the throttle a few times to make sure the idle speed does not change. Readjust if necessary.

- With the engine idling, turn the handlebar to each side. If handlebar movement changes the idle speed, the throttle cable may be improperly adjusted or incorrectly routed, or it may be damaged. Be sure to correct any of these conditions before riding.

WARNING


Operation with a damaged cable could result in an unsafe riding condition.

CLUTCH

Proper clutch lever play between the clutch lever and the clutch lever holder is 2-3 mm.

When there is too much lever play, first try adjusting the clutch lever.

Loosen the knurled locknut, turn the adjuster to obtain the proper amount of lever play, and tighten the locknut.

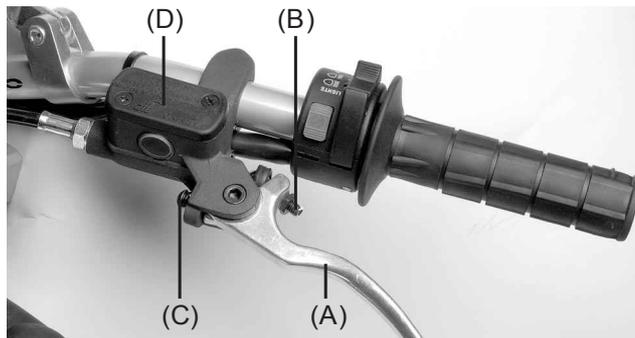

- (A). Clutch lever.
- (B). Knurled Locknut.
- (C). Adjuster.
- (D). Hydraulic fluid tank.


EXHAUST SYSTEM

The muffler and silencer reduce exhaust noise and conduct the exhaust gases back away from the rider.

If the muffler is badly damaged, dented, cracked or rusted, replace it with a new one. Replace the silencer packing. If the exhaust noise becomes too loud or the engine performance drops.

Silencer Packing Cange

- Remove the right side cover.
- Remove the silencer (B) mounting bolts (A) and pull the silencer off toward the rear.

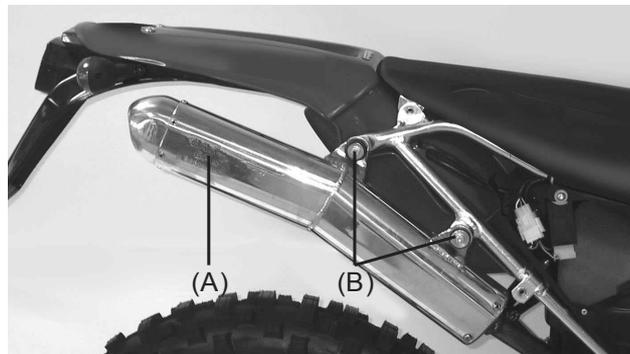**Install the inner pipe**

- Remove the inner pipe mounting rivots, and pull out the inner pipe.
- Pull off the old silencer packing, and install the new silencer packing.
- Install the inner pipe into the silencer.
- Install the silencer and right side cover.



DRIVE CHAIN


The drive chain must be checked, adjusted, and lubricated in accordance with the Periodic Maintenance table. If the chain becomes badly worn or maladjusted either too loose or too tight the chain could jump off the sprockets or break.

WARNING

A chain that breaks or jumps off the sprockets could snag on the engine sprocket or lock the rear wheel, severely damaging the motorcycle and causing it to go out of control.

Slack Inspection


The space between the chain and the swing arm at the rear of the chain slider should be 30-50 mm. Rotate the rear wheel to find the place where the chain is tightest (because it wears unevenly). Adjust the drive chain if it has too much or too little slack.

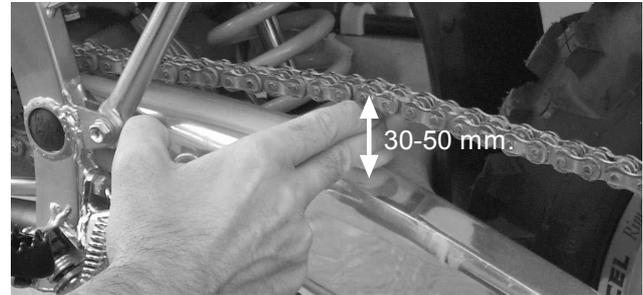

In addition to checking the slack, rotate the rear wheel to inspect the drive chain and sprockets for damaged rollers, loose pin and links, unevenly or excessively worn teet, and damaged teeth.

Slack Adjustment

- Loosen the rear axle (A) nut (B) and both chain adjuster locknuts.
- Turn the nuts on the chain adjusting bolts evenly until the drive chain has 30-50 mm. of space between the chain and the swing arm. To keep the chain and wheel aligned, the notch on the left chain adjuster should align with the same swing arm mark that the on the right chain adjuster aligns with.

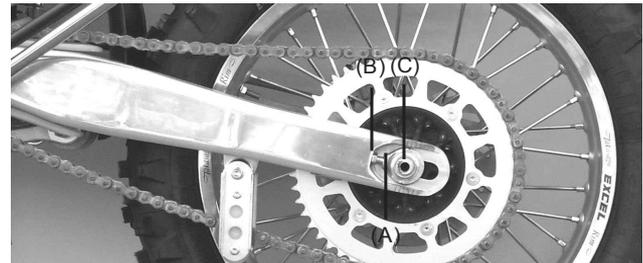

NOTE

Wheel alignment can also be checked using the straightedge or string method.

WARNING

Misalignment of the wheel will result in abnormal wear and may result in an unsafe riding condition.

- Tighten the axle nut to 98 N-m. (70ft-lbs).
- Tighten both chain adjuster locknuts.
- Rotate the wheel, measure the chain slack again at the tightest position, and readjust if necessary.

WARNING

If the axle nut is not securely tightened an unsafe riding condition may result.


Drive chain, chain guide, chain slider, and sprockets wear inspection.

When the chain has worn so much that it is more than 2% longer than when new, it is no longer safe for use and should be replaced. Whenever the chain is replaced, inspect both the engine and rear sprockets, and replace them if necessary. Worn sprockets will cause a new chain to wear quickly.

NOTE

For maximum stretch resistance and safety, a genuine part must be used for replacement. To minimize any chance of the master link coming apart, the


master link clip must be installed with the closed end of the «U» points in the direction of chain rotation.

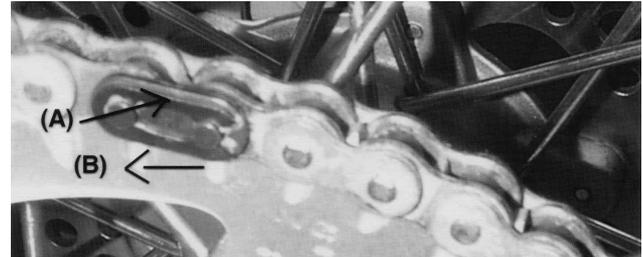

(A). Clip.
(B). Direction of Chain Rotation.

Chain Guide Wear


Visually inspect the drive chain guide. If the guide is worn excessively or damaged, replace it.

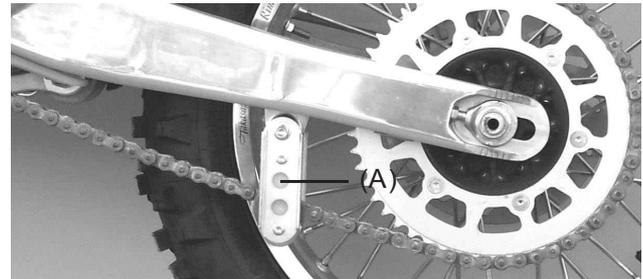

(A). Chain Guide.

Chain Slider Wear

Visually inspect the upper and lower chain sliders.

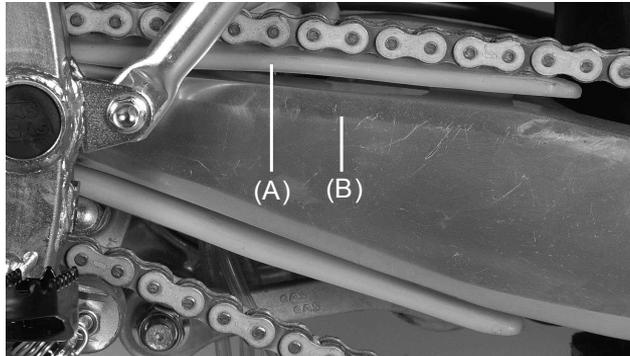

(A). Chain Slider.
(B). Seig Arm.


Sprocket Wear

Visually inspect the sprocket teeth. If they are worn or damaged, replace the sprockets.

Lubrication

Lubrication is necessary after riding through rain or in the mud, or any time that the chain appears dry. A heavy oil is preferred to a lighter oil because it will stay on the chain longer and provide better lubrication.

Apply oil to the side of the rollers so that it will penetrate to the rollers and bushings. Wipe off any excess oil.

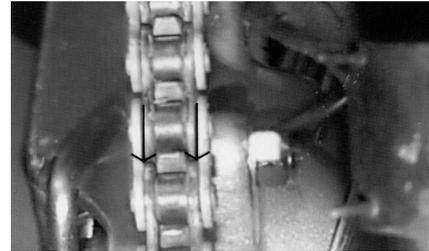


(A). Apply oil.

HANDLEBAR


To suit various riding positions, the handlebar position can be adjusted front to rear.

Handlebar position adjustment

Loosen the handlebar holder (A) nuts (B), turn about the handlebar holder, and tighten the nuts securely.

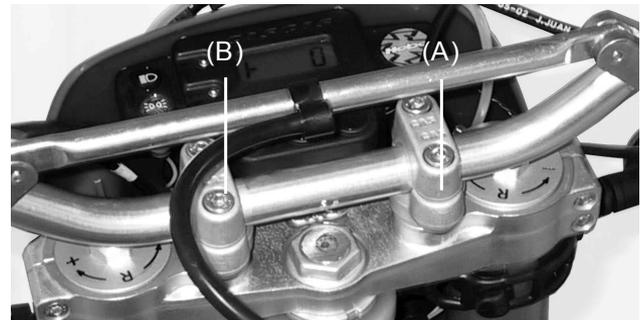

Tighten the clamp bolts, front first and then the rear, to 25 Nm of torque (18 ft.lbs).

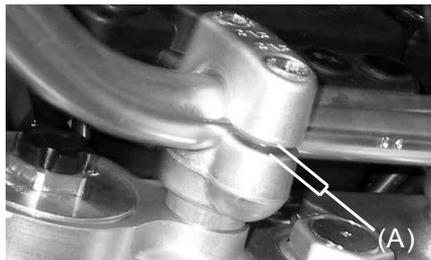


If the handlebar clamp is correctly installed, there will be an even gap at the front and rear after tightening. (A).

BRAKES

Disc and disc pad wear is automatically compensated for and has no effect on the brake lever or pedal action. So there are no parts that require adjustment on the brakes except brake lever play and brake pedal position

Front brake lever play


Adjust the front brake lever (A) to suit you. To adjust the brake lever play, loosen the locknut (B) and turn the adjuster to either side. After adjustment, tighten the locknut securely. Then check the brake for good braking power and no brake drag.

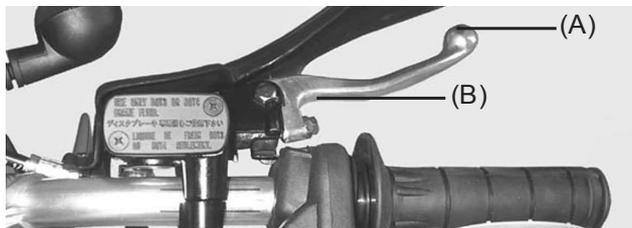

Rear brake pedal position

When the brake pedal is in rest position, there should be a play of 10 mm. If not, adjust the pedal position.

Check the brake for good braking power and no brake drag. To adjust the pedal play, loosen the locknut and turn the adjuster. After adjustment, tighten the locknut securely.

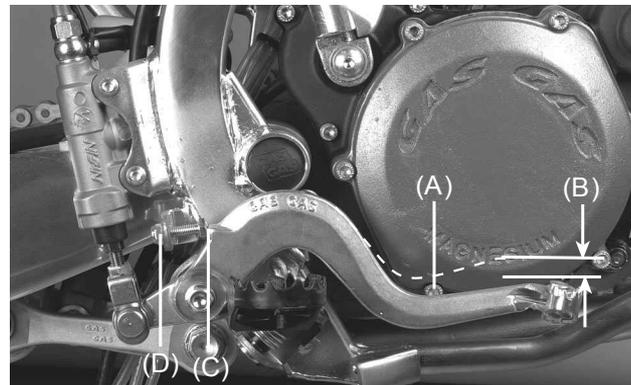

- (A). Rear brake pedal.
- (B). 10 mm of play.
- (C). Adjusting bolt.
- (D). Locknut.

WARNING

If the brake lever or pedal feels mushy when it is applied, there might be air in the brake lines or the brake may be defective. Since it is dangerous to operate the motorcycle under such conditions, have the brake checked immediately.


Disc brake fluid

In accordance with the Periodic Maintenance Chart, inspect the brake fluid level in the reservoir and change the brake fluid. The brake fluid should also be changed if it becomes contaminated with dirt or water.

Disc brake fluid: Use D.O.T.3 o D.O.T.4.

Fluid level inspection

The front (A) and rear (B) reservoirs must be kept more than half full with brake fluid. If the amount of brake fluid is insufficient, add brake fluid.

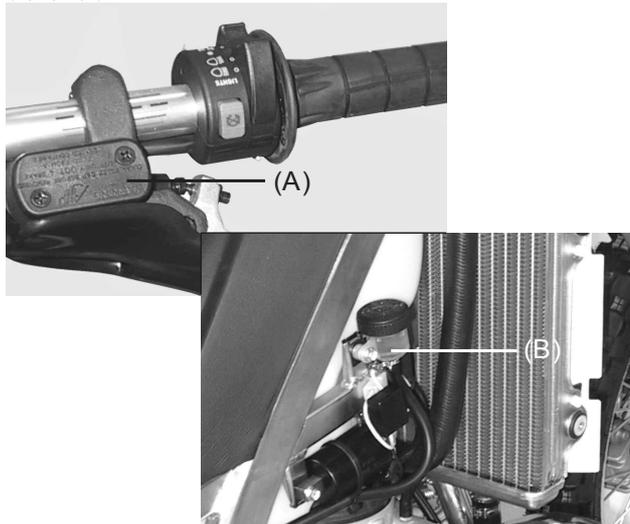

CAUTION

Do not spill brake fluid onto any painted surface.
Do not use fluid from a container that has been left open or that has been unsealed for a long time.
Check for fluid leakage around the fittings.
Check for brake hose damage.

WARNING

Do not mix two brands of fluid. Change the brake fluid in the brake line completely if the brake fluid must be refilled with a type other than the brake fluid already in the reservoirs.

Brake wear inspection

In accordance with the Periodic Maintenance Chart, inspect the brakes for wear. For each front and rear disc brake caliper. If the thickness of either pad is less than 1 mm, replace both pads in the caliper as a set. Pad replacement should be done by an authorized GAS GAS dealer.

Steering


The steering should always be kept adjusted so that the handlebar will turn freely but have no excessive play.



To check the steering adjustment, using a stand under the frame, raise the wheel off the ground. Push the handlebar lightly to either side; if it continues moving under its own momentum, the steering is not too light. Squatting in front of the motorcycle, grasp the lower ends of the front fork at the axle, and push and pull the bottom end of the front fork back and forth; if play is felt, the steering is too loose.

If the steering needs adjustment

- Using the stand under the frame, stabilize the motorcycle.
- Place a stand or block under the engine to raise the front wheel off the ground.
- Remove the handlebar (A).

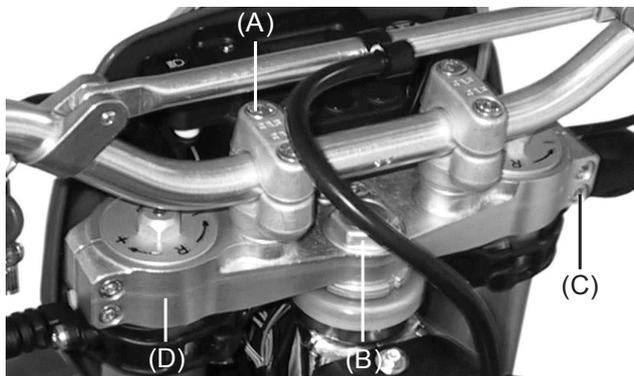

- Loosen the front fork upper clamp bolts, and remove the steering head nut and washer, and take off the steering stem head (B).
- Turn the steering stem locknut with the stem nut wrench to obtain the proper adjustment (C).
- Install the stem head (D).

- Tighten the steering stem head nut (B), and front fork upper or lower clamp bolts to the specified torque.

Stem head nut: 44 N-m (4.5 Kg-m).
Fork clamp bolts: 22 N-m (2.25 Kg-m).

- Check the steering again, and readjust if necessary.
- Install the removed parts.

STEERING BLOCADE

This mechanism (A) allows us to block the steering. Is placed on pipe steering.

You have to turn right the handlebar, pull in the key, turn left the key, push, turn right and pull out the key.



(A). Steering blocade.

CAUTION

Never forget the key in the lock. If you turn left the steering with the key in, it will be damaged.

FRONT FORK

The front fork should always be adjusted for the rider's weight and track conditions by using one or more of the following methods.

- Air pressure: Air pressure acts as a progressive spring and affects the entire range of fork travel. The air pressure in the fork increases as the fork heats up, so the fork action on your GAS GAS will get stiffer as the race progresses. Because of this, we don't recommend using air pressure for additional springing. Your GAS GAS forks are designed to work without adding any air.

- Rebound and compression dampening adjustment: This adjustment affects how quickly the rebound. The fork rebound dampening adjuster has 16 clicks. The seated position (fully clockwise until the adjuster stops) is full hard. From the point 6 - 8 clicks counterclockwise is the standard setting, and 16 clicks counterclockwise is full soft.


- Oil level adjustment: The effects of higher or lower fork oil level are only felt during the final 100 mm of fork travel. A higher oil level will make the fork rebound more slowly.

- Fork springs: Optional springs are available that are softer and stiffer than standard.

Air Pressure

The standard air pressure in the front fork legs is atmospheric pressure. The air pressure in the fork legs increases as operation progresses.

- Using the stand under the frame, stabilize the motorcycle.
- Place a stand or block under the engine so that the front wheel is raised off the ground.
- Remove the screws at the top of the front fork top bolts to let the air pressure equalize. Then replace them.

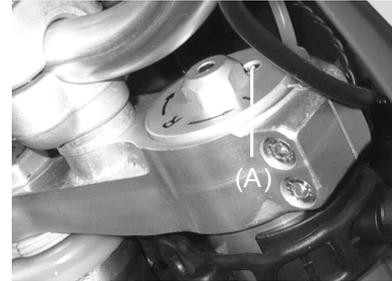


(A). Screw air purge.

Ajustar extensión

Rebound Dampening Adjustment

- To adjust turn the knob located at the top of the fork.
- Adjust to rider preference.

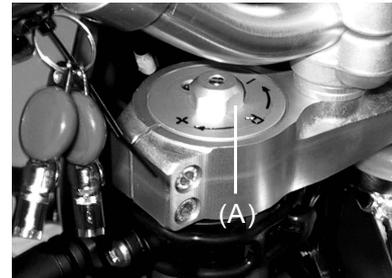

(A). Adjuster knobs.

CAUTION

The left and right fork tubes must be aligned (level) at the top clamps. (see the illustration).

Compression Dampening Adjustment


- To adjust, turn the knob located at the top of the fork. Adjust to rider preference.

Oil level Adjustment

- Using the stand under the frame, stabilize the motorcycle.
- Place a stand or block under the engine so that the front wheel is raised off the ground.
- Remove the front fender and front disc cover.
- Unbolt the brake hose holder mounting bolts.
- Remove the front fork protectors.
- Remove the handlebar clamp bolts and remove the handlebar.
- Remove the top clamps of the forklegs.
- Let the forks completely compress.
- Raise the fork springs from the fork.
- Grasp the top caps and loosen the lock nuts on the caps.
- Remove the caps from the fork legs.
- Remove the fork springs.
- Put the oil level gauge on the top of the fork tube, and measure the distance from the top of the fork tube to the oil level.

Stand oil level

Marzocchi: 110 mm.
WP: 120 mm.
Öhlins: 110 mm.

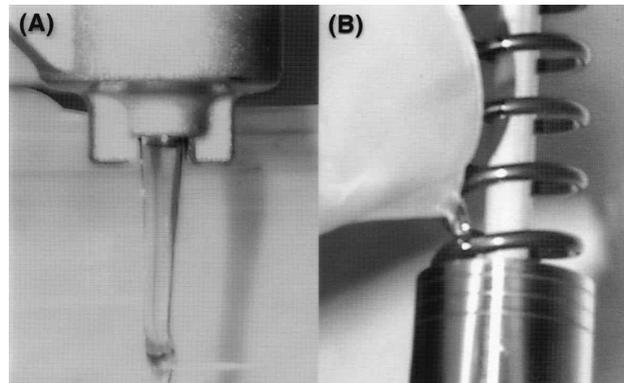


(A). Draining Oil.

(B). Filling oil.

Adjust the oil level as required within the adjustable range using the following oil:


Recommended oil

MARZOCCHI SAE 7'5
WP. SAE 5
ÖHLINS 5 - 7'5

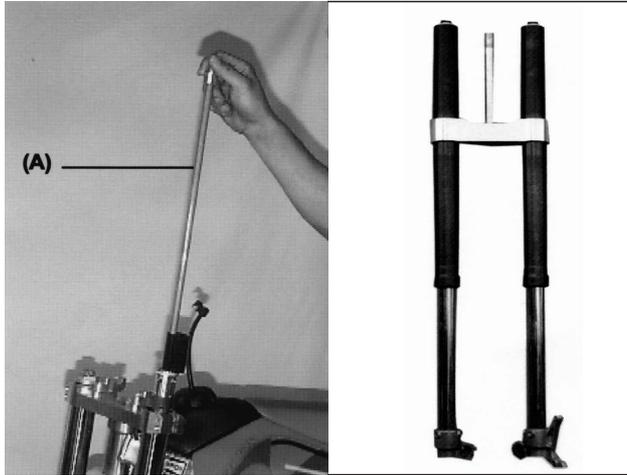

(A). Push Rod

- Pull up the push rod (A) slowly.
- At this time, the fork oil comes out of the push rod hole, let it overflow until it stops.
- Put the fork spring (1) into the fork tube.
- Pull down the fork spring and insert the spring holder (5) (special tool) under the push rod nut or piston holder.
- Install the top cap bolt (3) on the top of the fork tube and tighten it to 29 N-m. (21 ft.lbs).
- Repeat on other fork.
- Install removed parts.

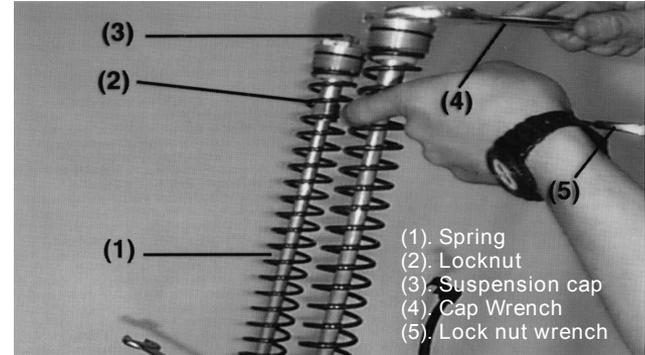

Fork Springs


Different fork springs are available to achieve suitable front fork action in accordance with the rider's weight and track conditions.

- Harder springs make the fork stiffer, and rebound action quicker.
- Softer springs make the fork softer, and rebound action slower.

Fork Clamp Position Adjustment

Steering qualities are greatly affected by the fork clamp position (the amount of the outer tube projecting above the steering stem head). When the fork tube height is smaller, the front end becomes lighter due to change in weight bias. Also, it tends to understeer in turns at «whash out». When the height is greater, the results are opposite. Be sure the front tire doesn't rub the fender when the fork tubes compress fully. Make this adjustment in 5mm increments.

| |
|--|
| CAUTION |
| The outer tubes, both right and left, should be adjusted evenly. |

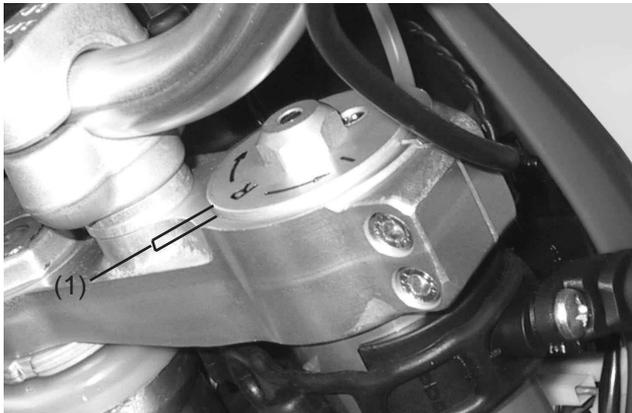

(1). Fork tube height

REAR SUSPENSION

The rear suspension system of this motorcycle is single shock. It consists of a rear shock absorber, swing arm, tie rods and rocker arm.

In general the operating characteristics of the single shock are similar to the front fork. But, in achieving progressive spring characteristics a linkage system is used.


To suit various riding conditions, the spring preload of the shock absorber can be adjusted or the spring can be replaced with an optional one. Also the dampening force can be adjusted easily so changing oil viscosity is unnecessary.

Shock Rebound Dampening Adjustment Rear shock Absorber

to adjust shock rebound dampening, turn the rebound dampening adjuster on the rear shock absorber lower end until you feel a click.

The total number of adjustments is: 60 "CLICKS".
The standard setting is: 25 "CLICKS".

(Counterclockwise from fully closed).

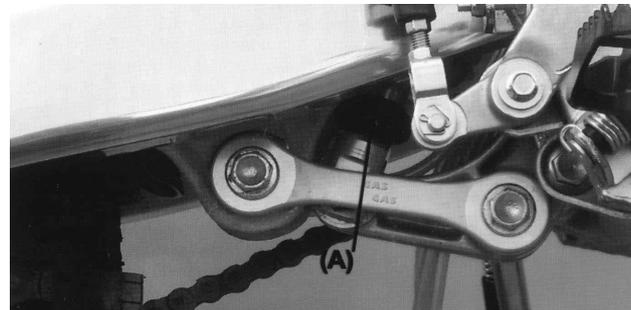

(A). Rebound dampening adjuster.

Shock compression dampening adjustment

To adjust shock compression dampening, turn the adjuster screw on the gas reservoir until you feel a (click).

The total number of adjustments is: 60 "CLICKS".
The standard setting is: 30 "CLICKS".

(Counterclockwise from fully closed).



(A). Compression dampening adjuster

Adjusting the spring


- Remove the seat, right and left side number plates.
- Loosen the air cleaner duct clamp screw.
- Remove the silencer.
- Remove the rear subframe with the air cleaner box.



(A). Rear subframe.
(B). Air cleaner box.

Suspension spring

The standard spring is a 4.0.
The standard spring preload length is 258 mm.

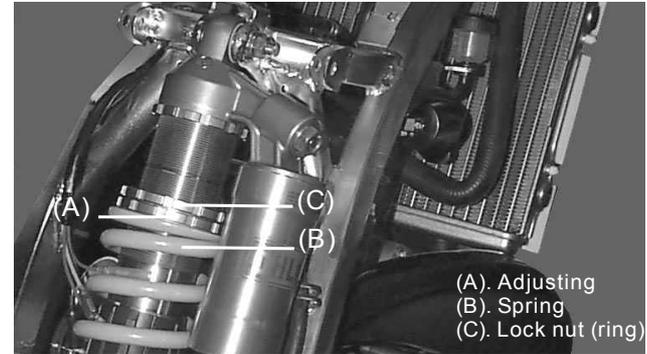

(A). Adjusting
(B). Spring
(C). Lock nut (ring)

- Tighten the locknut (ring) securely.
- After adjustment, move the spring up and down to make sure that the spring is seated.
- Install the parts removed.

Rear Shock Absorber Spring Replacement

In addition to the standard spring, harder and softer springs are available. If the standard spring is improper for your purpose, select a proper one according to the rider's weight or course conditions.

- Using the harder spring: The spring rate is higher.
- Using the softer spring: The spring rate is lower.

NOTE
Look at page 106.

WARNING

Improper removal of the spring from the rear shock absorber body may cause the spring and associated parts to be ejected at high velocity. Always wear eye and face protection. Removal and installation of spring should be performed by a person or company.

WHEELS**Tires**

- Tire pressure affects traction, handling, and tire life.
- Adjust the tire pressure to suit track conditions and rider preference, but do not stray too far from the recommended pressure.

NOTE


Tire pressure should be checked when the tires are cold before you ride.

Track condition

- When the track is wet, muddy, sandy or slippery, reduce the tire pressure.
- When the track is pebbly or hard, increase the tire pressure.

Spokes and Rim

The spokes on both wheels must all be tightened securely and evenly and not be allowed to loosen. Unevenly tightened or loose spokes will cause the rim to warp, hasten nipple and overall spoke fatigue, and may result in spoke breakage.

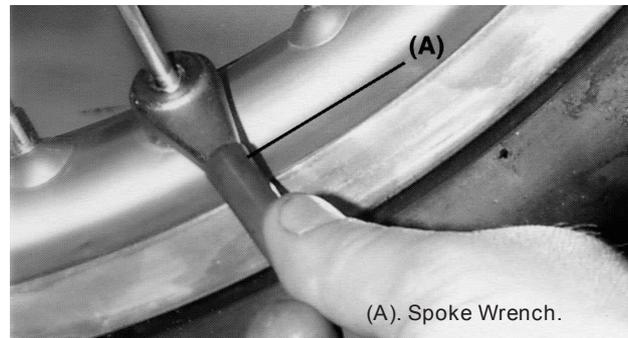**Tire bead lock (clamp)**

There is a lock (clamp) on the front and rear wheels. The bead lock (clamp) prevents the tire and tube from slipping on the rim and damaging the valve stem. Valve stem damage may cause the tube to leak, necessitating tube replacement. In order that the tire and tube remain fixed in position on the rim, inspect the bead lock (clamp) before riding and tighten it if necessary. Tighten the valve stem nut finger tight only.

NOTE

The weld joint area of the rim may show excessive runout. Disregard this when measuring runout.

CLEANING

1- Preparation for washing

Before washing, precautions must be taken to keep water off the following places:

Rear opening of: The silencer cover with a plastic bag secured with rubber bands

Clutch and brake levers, hand grips, engine stop button: Cover with plastic bags.

Air cleaner intake: Close up the opening with tape or stuff in rags.

2- Where to be careful

Avoid spraying water with any great force near the following places:

- Disc brake master cylinders and calipers.
- Under the fuel tank : If water gets into the ignition coil or into the spark plug cap, the spark will jump through the water and be grounded out. When this happens, the motorcycle will not start and the affected parts must be wiped dry.
- Front and rear hubs.
- Steering pivots (Steering stem head pipe).
- Suspension linkage system pivots.
- Swing arm pivot.


3- After washing:

- Remove the plastic bags, and clean the air cleaner intake.
- Lubricate the points listed in the lubrication section.
- Start the engine and run for 5 minutes.
- Dry the brakes before operating the motorcycle.

| WARNING |
|--|
| Never wax or lubricate the brake disc. Loss of braking and an accident could result. Clean the disc with an oil-less solvent such as trichloroethylene or acetone. |


BOLT AND NUT TIGHTENING

Every day before riding, check without fail the tightness of the bolts and nuts described here. Also, check to see whether or not each cotter pin is in place and in good condition.

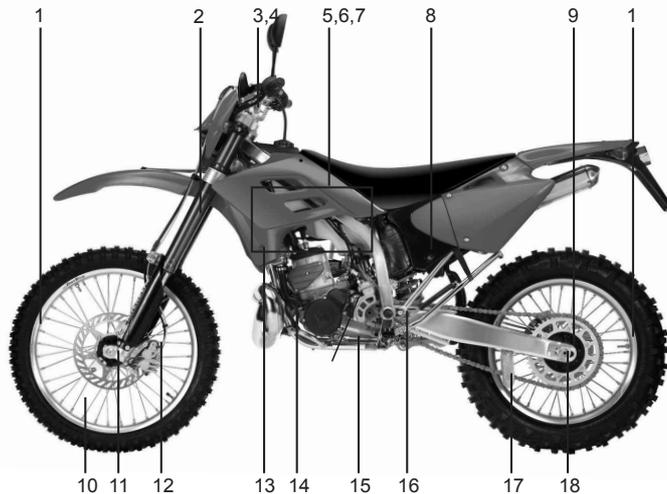

- 1- Bead lock nut
- 2- Front fork clamp bolts
- 3- Handlebar mounting bolt
- 4- Clutch lever support bolt
- 5- Cylinder head bolts
- 6- Spark plug
- 7- Cylinder head bolts
- 8- Air cleaner box bolts
- 9- Disc plate screws

- 10- Spokes
- 11- Front axle clamps nuts
- 12- Brake hose clamp nuts
- 13- Radiator mounting bolts
- 14- Engine mounting nuts
- 15- Shift pedal bolt
- 16- Rear subframe mounting bolts
- 17- Chain guide bolts
- 18- Chain adjuster locknuts

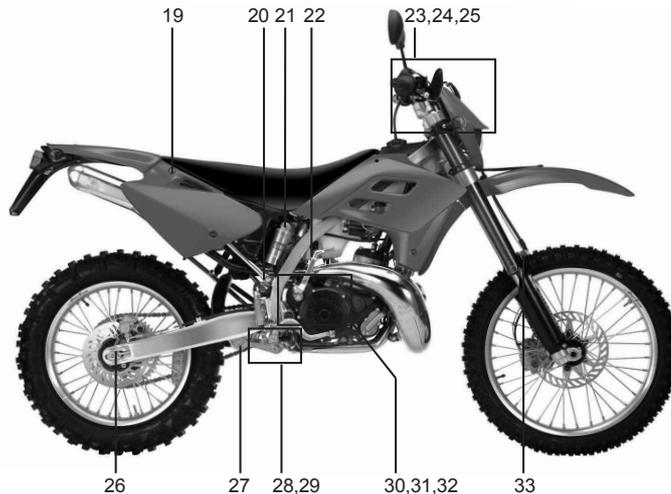

- 19- Seat mounting bolt
- 20- Subframe bolts
- 21- Rear chock absorber bolts
- 22- Exhaust mounting bolts and nut
- 23- Fork clamp bolts
- 24- Steering shaft nut
- 25- Rear brake mounting bolt
- 26- Rear axle nut
- 27- Connecting rod mounting bolt

- 28- Rear brake pedal bolt
- 29- Rocker arm mounting bolt
- 30- Swingarm shaft nut
- 31- Kick pedal bolt
- 32- Kick pedal nut
- 33- Brake hose mounting bolts

Torque Table

Tighten all bolts and nuts to the proper torque using an accurate torque wrench. A bolt or nut if insufficiently tightened may become damaged or fall out, possibly resulting in damage to the motorcycle and injury to the rider.




| | PART NAME | N-m / FT.LBS. | Kg-m / IN.LBS. |
|----------------------------|---------------------------------|------------------------|----------------|
| E N G I N E | Cylinder head bolts | 25/ 18 | 2.5/ 221 |
| | Cylinder base nuts | 34/ 25 | 3.5/ 300 |
| | Engine drain plug | 20/ 15 | 2.0/ 177 |
| | Kick pedal bolt | 20/ 15 | 2.0/ 177 |
| | Kick pedal nut | 25/ 18 | 2.5/ 221 |
| | Shift pedal bolt | 10/ 7 | 1.0/ 88 |
| | Spark plug | 27/ 20 | 2.8/ 239 |
| | Water pump cover drain plug | 9/ 6,6 | 0.9/ 80 |
| | C H A S S I S | Caliper mounting bolts | 25/ 18 |
| Disc plate mounting screws | | 10/ 7 | 1.0/ 88 |
| Engine mounting bolts | | 36/ 26,5 | 3.6/ 318 |
| Front axle | | 51/ 38 | 5.1/ 451 |
| Trottle clamp bolts | | 6/ 4 | 0.6/ 53 |
| Tripple clamp bolts | | 29/ 21 | 3.0/ 256 |
| Steering shaft nut | | 98/ 72 | 10.0/ 88 |
| Rear axle nut | | 98/ 72 | 10.0/ 88 |
| Brake pedal nut | | 9/ 6,6 | 0.9/ 80 |
| Front fork top bolts | | 26/ 19 | 2.7/ 230 |
| Handlebar clamp bolts | | 39/ 28 | 4.0/ 345 |
| Steering shaft nut | | 29/ 21 | 3.0/ 256 |
| Spokes | | 1,5/ 1,1 | 0.15/ 13 |
| Axle clamp nuts | | 4/ 3 | 4.5/ 35 |
| Swingarm pivot bolt | | 81/ 60 | 8.3/ 716 |
| Rear tie rod bolts | 81/ 60 | 8.3/ 716 | |

LUBRICATION



Lubricate the points shown here, with either motor oil or regular grease, in accordance with the Periodic Maintenance Chart or whenever the vehicle has been operated under wet or rainy conditions, and especially after using a high pressure spray washer. Before lubricating each part, clean off any rusty spots with rust remover and wipe off any grease, oil, dirt, or grime.

General lubrication

- Clutch lever (A).
- Front brake lever (B).
- Rear brake pedal (C).
- Rear brake rod joints (D).
- Shift pedal (E).

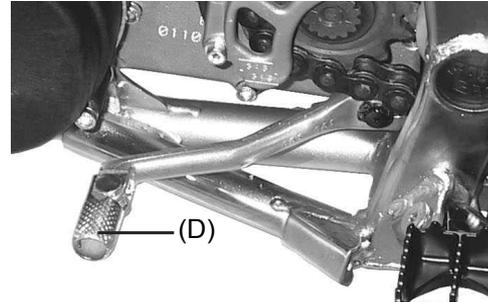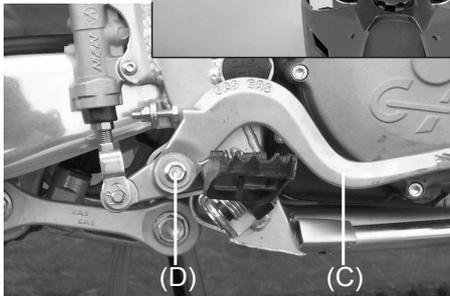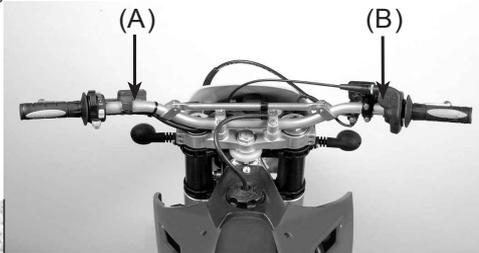


Use an aerosol cable lubricant with a pressure luber:

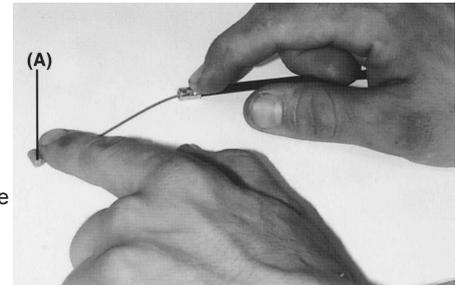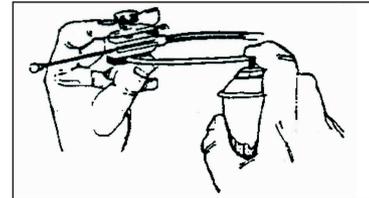

Apply grease to the following point throttle inner cable upper ends.

Chain lubrication

Lubricate the chain after drive over wet places or when the chain looks dry. It's better a high viscosity oil than a small viscosity oil because it will stay a long time in chain.

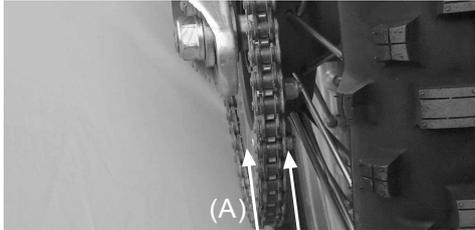

TUNING

1. CARBURETOR TUNING

Tuning a carburetor is not the mysterious science many racers believe it to be. One needs only to establish a basic knowledge of the identification and function of carb components as well as how the work together to do the job well.

Change due to temperature:


| Condition | mixture | setting change |
|---------------|----------|----------------|
| Cold air | lean | rich |
| Warm air | rich | lean |
| Dry air | lean | rich |
| Low altitude | standard | standard |
| High altitude | rich | lean |

NOTE

The main jet should be increased or decreased one to five sizes and tested until the engine gives maximum power.

Main jet

The number of the main jet, stamped on the bottom or side of the jet, indicates the relative size of the hole in the jet which meters fuel.


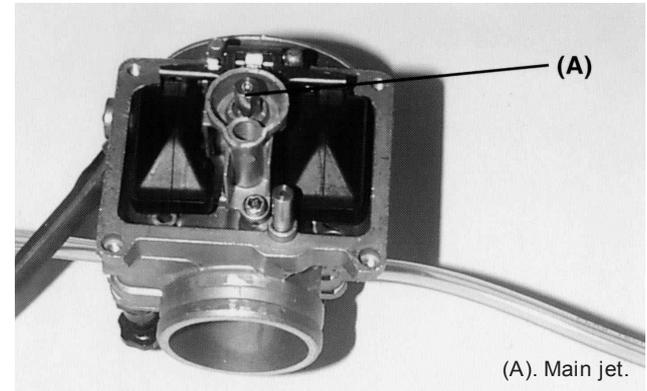


WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Always stop the engine and do not smoke. Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.


Slow Jet (pilot jet) and air screw

The slow jet and air screw controls the mixture in the closed to 1/8 throttle range, but has little effect on up to full throttle. To adjust the mixture in this range, the air screw can be turned to change the air flow through the circuit, or the slow jet can be changed to provide more or less fuel. Start by turning the air screw to provide more or less fuel. Screwing it in richens the mixture. Air screw (A) specs indicate the turns out from a lightly seated position. Make changes in 1/2 turn increments. If turning the screw between one and two-and-a-half turns doesn't provide the desired results, change the slow jet (B).

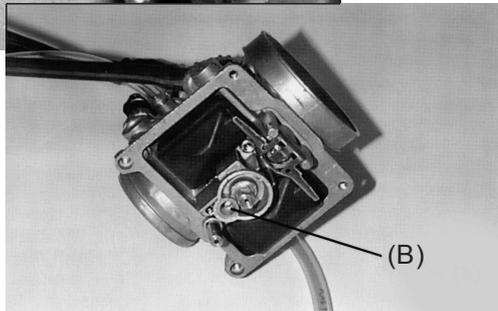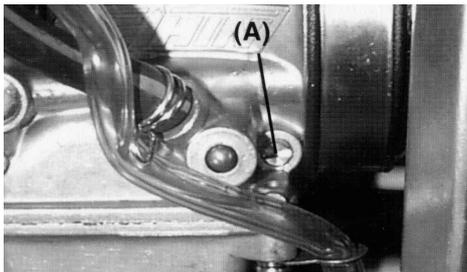

Jet needle

The jet needle and jet needle hole together have their greatest effect in the 1/4 to 3/4 throttle range. The needle moves in and out of the jet needle hole; since the needle is tapered, its position in the jet needle hole determines the amount of fuel allowed through. There are five grooves in the top of the needle in which a circlip fits. This clip locates the needle in the throttle valve and, therefore, determines its position relative to the jet needle hole.

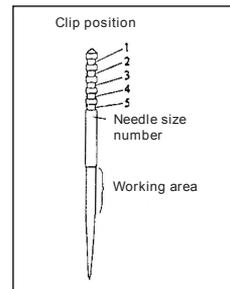

Test runs

- Warm up the engine with the carburetor at the standard settings, and run two or three laps of the course while examining the operating condition of the spark plug.
- Test-ride the bike by varying the throttle opening.

Symptoms of improper settings

If your machine exhibits one or more of the symptoms listed below, it may need carb tuning changes.

Before attempting any changes, however, make sure that everything else is in good shape and tuned properly.

Check the condition of the spark plug, make sure the ignition timing is correct, service the air cleaner element, decarbonize the muffler. If your machine has run properly at a certain track in the past and then starts running poorly with the same carb settings, the problem is almost certain to be elsewhere; changing the carb settings in such a case would probably be a waste of time.

| Condition of spark plug | | |
|-------------------------|-----------------------------------|--|
| Correct | Insulator dry and light tan color | |
| Too lean | Insulator is whitish | Replace the main jet with one step larger |
| Too rich | Insulator is wet, black and sooty | Replace the main jet with one step smaller |

- Set the carburetor so that the engine delivers satisfactory power at any throttle opening.
- If the air-fuel mixture is too lean, the engine tends to overheat and may seize up; on the other hand, if it is too rich, the spark plug easily gets wet, thus causing richness, the spark plug easily gets wet, thus causing misfires. The proper strength of the mixture varies depending on atmospheric conditions (pressure, humidity, and temperature). Taking these conditions into consideration, adjust the carburetor settings properly

Standard Settings

| FUEL | UNLEADED | LEADED |
|------------------------|----------|--------|
| Throttle valve cutaway | 7 | 7 |
| Slow jet | 38 | 35 |
| Jet needle | N1EC | N1ED |
| Main Jet | 185 | 160 |

Correction factors:

(For changes in altitude and temperature).

1. Find your correction factor to adjust the carburetor.

EXAMPLE: 1000 meters (3200 ft) altitude with an air temperature of 35° C (95°F). The correction factor is 0.94 (see dotted line for the example).

2. Using your correction factor, select the correct slow jet and main jet.

Example: For a correction factor of 0.94, multiply the jet size by that number.

Slow jet: # 50 x 0.94 = #47

Chiclé principal: # 162 x 0.94 = # 1

3. Find your correction factor on the Jet Needle/Air Screw chart and change the jet needle clip position and air screw opening as indicated.


Example: For correction factor of 0.94, raise the needle clip one position and turn out the air screw one extra turn.

- Jet needle clip setting: 3rd groove from top minus 1 - 2nd groove.

- Air screw opening: 1 1/2 + 1 turn = 2 1/2 turns out.

NOTE

For the following recommendations to be accurate, you must use the standard settings as a base-line. Also don't change any of the settings until you've determined what changes are necessary. All specifications are based on the use of the specified fuel and oil.

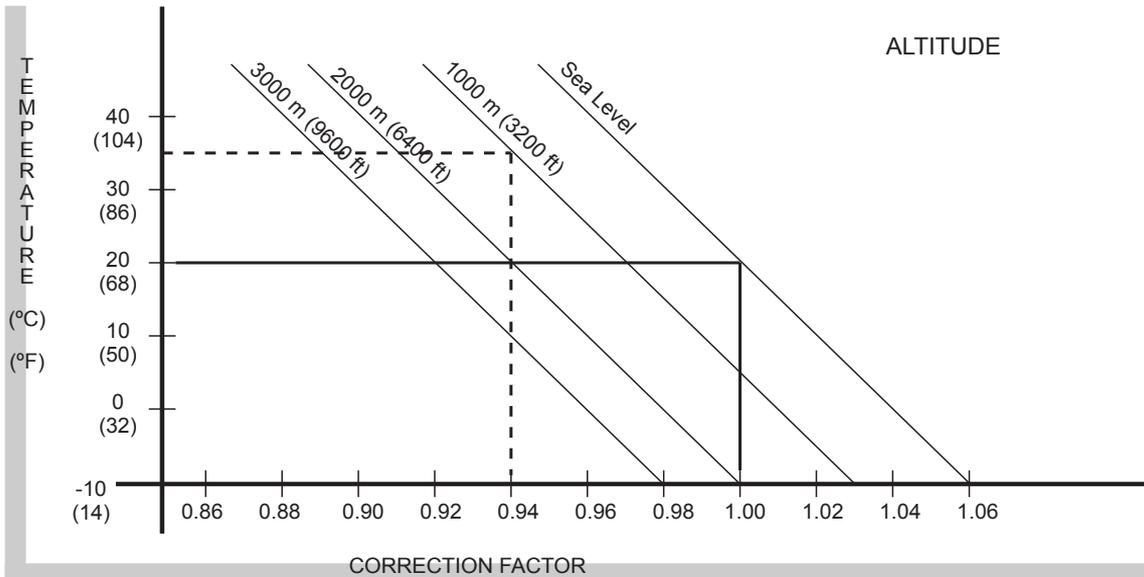

| JET NEEDLE/ AIR SCREW CHART | | | | | |
|-----------------------------|-------------------------|-------------|-------------|--------------|-------------------------|
| CORRECTION FACTORS | 1,06 or ABOVE | 1,06 - 1,02 | 1,02 - 0,98 | 0,98 - 0,94 | 0,94 or BELOW |
| JET NEEDLE SETTING | LOWER CLIP ONE POSITION | SAME | SAME | SAME | RAISE CLIP ONE POSITION |
| AIR SCREW OPENING | ONE TURN IN | 1/2 TURN IN | SAME | 1/2 TURN OUT | ONE TURN OUT POSITION |

2. SUSPENSION TUNING

No area of machine adjustment is more critical than proper suspension tuning. An improperly tuned suspension will keep even the best rider from attaining the full benefit of his machine's ability. Match the suspension to the rider and the course conditions.

- If the machine is new, break-in the suspension with at least one hour of riding before making any setting evaluations or changes.
- The three major factors which must be considered in suspension tuning are Rider weight, rider ability, and track conditions. Additional influences include the rider's style and positioning on the machine.
- If you have a problem, test by changing your riding posture or position so that the cause of the problem can be deduced.
- It is a wise practice to adjust suspension settings to suit the rider's strong points. If you are fast through the corners, adjust the suspension to allow fast cornering.
- Make setting changes in small increments; a little bit goes a long way, and it is very easy to overadjust a setting.
- The front and rear suspension should be balanced; when one is changed, the other might need to be changed similarly.
- When evaluating suspension performance the rider must make every effort to ride consistently and recognize the effects of his input; such things as changes in rider position and increasing fatigue may lead to incorrect judgments about necessary setting adjustments.
- When the proper settings have been determined for a particular track, they should be written down for reference when returning to that track.

Front fork

The fork oil level in the fork tube is adjustable. A change in the fork oil level will not affect the spring force much at the top of fork travel, but it will have a great effect at the bottom:

- When the oil level is raised:

The air spring effect becomes more progressive, and the front fork action feels "harder" in the later stage of travel, near the bottom.


- When the oil level is lowered:

The air spring is less progressive, and the front fork does not become as "hard" in the later stage of travel.

- Changing the fork oil level works effectively at the end of fork travel. If fork bottoming is experienced, raise fork oil level in 10 mm increments. This will change the secondary spring rate.

Oil level adjustment

Adjust the front fork oil level (see the Oil Level Adjustment of the Front Fork section in the Maintenance and adjustment chapter).

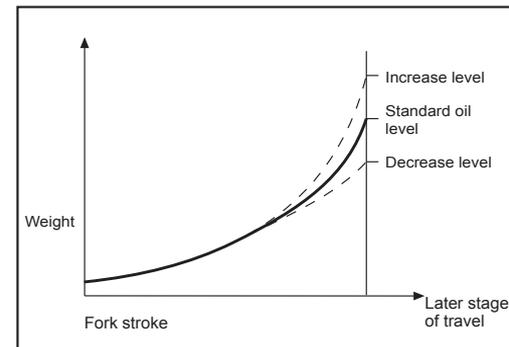

Troubleshooting Improper Settings

Listed below are some symptoms of improper suspension settings and the most likely means of correcting them.

The proper settings can be achieved by applying the information in this chapter in a scientific, methodical manner; this does not mean, however, that you must be a scientist or trained technician to succeed. Simply take time to think about the changes you believe necessary, check them against the symptoms and cures described here, make the changes in small increments, and take notes on the changes and their effects.

Symptoms of the Front Forks

Too hard

- The front forks are too stiff
 1. Rebound or compression damping adjustment incorrect.
 2. The springs are too strong.
 3. Too much oil.
 4. Too heavy oil.

- The front forks stiffens up the end of stroke

1. The fork oil level is too high.

- The front forks operate but ride is too hard

1. Oil too heavy.
2. Worn out fork oil.

Too soft

- The front fork dive excessively during braking and deceleration

1. Fork oil level is low.
2. Springs are too soft.
3. Oil too light.
4. Fork oil is worn out.

5. Rebound or compression damping adjusting incorrect.

Symptoms of the rear shock:

Too hard

- The suspension is too stiff
 1. Compression damping is too high.
 2. Spring is too hard.

Too soft

- On landing after a big jump, bottoming occurs (normally O.K.)
 1. Spring preload is too soft or compression damping is too soft.
 2. Spring is too soft.
 3. Shock oil is worn.

Determining the Proper Settings:

- Standard Settings

From the factory, the machine is set up for an intermediate-weight rider possessing intermediate riding ability. Hence, if the actual rider weight is considerably more or less than this, or if his riding experience and ability are much greater or lesser than the intermediate made to put the suspension "in the ballpark".

- Readjustment of the suspension

| | |
|--------|---------------|
| Smooth | Softer spring |
| Rough | Harder spring |

Riding experience

Beginner Softer: spring with more rebound damping.
 Experienced: Harder spring.

Rider's weight

Heavy: Harder spring.
 Light: Softer spring.

Type of course

- Many corners:
 Lower the front end slightly (increase the fork tube height 5mm). This quickens steering and turning ability.

- Fast course with many jumps:
 Raise the front end slightly (decrease the front tube height 5 mm).

- Deep whoops, or sandy ground:
 Raise the front end slightly to gain stability.

After making such preliminary adjustments, begin the actual on-track testing and evaluation.

CAUTION

- 1- Always make changes in small increments.
- 2- Make sure the rider is consistent in this evaluation of improper suspension performance.
- 3- A change in the front suspension might require a change in the rear, and vice versa.

Front and rear compatibility:

Use this procedure to determine if the suspension is balanced reasonably well: Hold the bike upright (retract the side stand). While standing next to the machine, lightly pull on the front brake, place one foot on the footpeg closest to you, and push down hard. If the bike maintains its level attitude as the suspension is compressed, the spring rates are well balanced. Sit astride the bike and take a riding posture. Next check to see that the bike is in a horizontal position. If one end drops noticeably more than the other, the front and rear are not compatible and must be readjusted to achieve a better balance.

This is one of the most effective adjustment procedures but suspension settings will vary depending on the conditions at the track and the rider's preferences.

Front end seaching during down hill or during acceleration out of corner:

Front fork is too soft.

1. Increase the compression damping or rebound damping.
2. Increase the oil level 10 mm.
3. Use alternate harder spring, or increase spring preload.

Front end "knives" or oversteers in turns: (front end tends to turn inward):

Front fork is too soft.

1. Increase the compression damping or rebound damping.
2. Increase the oil level 10 mm.

Front end pushes or "washes out" in turns:

1. Decrease the compression damping or rebound damping.
2. Release the air at the fork tubes.
3. Decrease oil level 10-20 mm.
4. Use softer spring.

Front fork doesn't respond to small bumps in sweeping turns:

- Front Fork is too hard:
 1. Decrease the compression damping or rebound damping.
 2. Decrease oil level 10 mm.
 3. Use softer duty spring.

Rear end "kicks" when braking over bumps:

- The shock probably has too little rebound damping.
- Increase the rebound damping.

Rear tire won't "hook up" out of corners:

- (A lack of traction coming out of turns)
- The shock may be too stiff:
 1. Decrease the rear shock spring preload.
 2. Decrease the compression damping.
 3. Use softer spring (In case of a lightweight rider).

Front and rear of the bike bottom off high speed jumps:

- (If harsh bottoming occurs once or twice per lap of the race)
- . Front and rear suspension system are too soft.

1. Delantera: Increase oil lever and/or use harder spring.
2. Rear: Increase spring preload and/or increase compression damping or use harder spring.

NOTE

After any adjustment, check front and rear compatibility.

Adjustment depending on bottoming condition:(rear shock absorber).

- Bottoms at low speed.
- Increase spring preload until maximum preload is achieved.
- Bottom after successive 3 or 4 successive jumps.
- Decrease rebound damping.

NOTE

The rear shock on this machine may mislead some riders.

a) The rear shock bottoms when the spring and damping are overcome by the total weight of the machine and rider (due to full stroke).

b) A bottoming sensation (even through the machine is not bottoming) may actually be the inability of rider and machine weight to overcome an overly stiff spring or excessive damping.

Observe the rear end off jumps; if it doesn't approach bottoming, try lowering the spring preload and damping.

Gearing

Preconditions:

| Course condition | Rear sprocket |
|---|----------------|
| Fast course Many courves or hills Sandy or soft groud | Small Large |

- Si la parte recta de la "crono" es larga, el desarrollo puede alargarse por lo tanto la velocidad aumenta.

- If the straight portion of a course is longer, the secondary reduction ratio should be reduced so that the machine speed can be increased.

- When the course has many corners or uphill or is wet, the secondary reduction ratio should be increased so that gear shifting is possible with smooth acceleration.

- Actually, the speed must be changed depending on the ground condition on the day of race and therefore, be sure to run through the racing circuit prior to a race and set the machine suitable for the entire course.

- If the straight portion of a course on which the machine can be run at maximum speed is longer, the machine should be set so that the maximum machine speed can be developed toward the end of the straight course, but care should be taken not to over-rev the engine.

- It is difficult to set the machine to be best suited for all portions of the circuit. Therefore, determine which circuit portions will have the greatest effect on lap time. Set the machine for these portions. Confirm your settings by recording lap times after each change. In this way the machine will deliver best performance for the entire circuit.

Special Care According to Track Conditions.

1. In dry, dusty conditions (such as volcanic ash or fine powdery dust) special care must be given to keep the air cleaner element clean.

2. When riding on wet heavy clay the mud adheres to the tires and other parts of the vehicle. The mud can add significantly to the weight of the vehicle and therefore reduce performance. Take care to remove built-up mud from the tires and chassis after each ride, before drying occurs.

3. The engine works hardest in muddy conditions and the radiator can become clogged with mud. Take care not to overheat the engine in these conditions. The engine also works very hard when ridden in deep sand.

4. In muddy or sandy conditions adjust the chain looser than in other conditions as the chain and sprockets will pack with mud/sand and reduce chain slack.

5. Check chain and sprocket wear frequently when riding in mud or sand since wear is increased in these conditions.

6. In dusty conditions as the air cleaner collects dust, the engine runs richer. Therefore it may be advisable to run slightly leaner jetting (main jet) in very dusty conditions.

SPARE PARTS Look at part list.

PREPARATION FOR COMPETITION

(1). Check:

1. Front axle shaft and nut, or axle clamp nut tightness
2. Front fork clamp bolt tightness
3. Handlebar clamp bolt tightness
4. Throttle grip screw tightness
5. Throttle grip operation
6. Front and rear brake hose installation
7. Front and rear brake fluid level
8. Front and rear brake disc and caliper installation
9. Front and rear brake function
10. Fuel tank installation
11. Shift pedal bolt tightness
12. Engine mounting bolt tightness
13. Engine sprocket installation
14. Brake pedal bolt tightness
15. Transmission oil level
16. Carburetor clamp screw tightness
17. Carburetor top cap tightness
18. Linkage tie rod mounting bolt tightness
19. Linkage rocker arm mounting bolt tightness
20. Rear shock absorber bolt tightness
21. Swing arm pivot shaft nut tightness
22. Rear axle shaft nut tightness
23. Rear sprocket bolts or nuts tightness
24. Rear brake pedal operation
25. Seat installation
26. Front and rear wheel spoke tightness
27. Front and rear tire air pressure
28. Drive chain slack
29. Coolant level

(2). After first race maintenance:

1. Air cleaner element
2. Drive chain slack
3. Rear sprocket nuts
4. Sprockets
5. Front and rear tire air pressure
6. Front and rear axle shaft nuts
7. Pivot shaft nut
8. Muffler, silencer bolts or nuts
9. Front, rear fender mounting bolts or nuts
10. Fuel tank, seat mounting bolts or nuts
11. Front and rear brakes
12. Steering play
13. Fuel tank fill
14. Coolant level check

(3) Maintenance notice for after riding on dusty course:

If dirt or dust gets through into the engine, the crankshaft big end will wear excessively. After riding, inspect the crankshaft big end. If the crankshaft big end is worn past the service limit, replace the crankshaft big end with a new one.

(4) Maintenance notice for after riding in rain on muddy course:

1. Apply grease to swing arm pivot and rear suspension system
2. Inspect the drive chain and rear sprocket wear
3. Clean the air cleaner element
4. Check the cylinder and crankshaft big end bearing
5. Grease the throttle grip and cable

STORAGE

When the motorcycle is to be stored for any length of time, it should be prepared for storage as follows:


- Clean the entire vehicle thoroughly.
- Run the engine for about five minutes to warm the oil shut it off and drain the transmission oil.
- Put in fresh transmission oil.
- Empty the fuel from the fuel tank, and empty the carburetor float bowl. (If left in for a long time, the fuel will deteriorate).
- Remove the spark plug and put several drops of SAE 30 oil into the cylinder. Kick the engine over slowly a few times to coat the cylinder wall with oil, and install the plug.
- Lubricate the drive chain and all the cables.
- Spray oil on all unpainted metal surfaces to prevent rusting. Avoid getting oil on rubber parts or in the brakes.
- Tie a plastic bag over the exhaust pipe to prevent moisture from entering.
- Set the motorcycle on a box or stand so that both wheels are raised off the ground. (If this cannot be done, put boards under the front and rear wheels to keep dampness away from the tire rubber).
- Put a cover over the motorcycle to keep dust and dirt from collecting on it.

To put the motorcycle back into use after storage.

- Remove plastic bag from exhaust.
- Make sure the spark plug is tight.
- Fill the fuel tank with fuel.
- Check all the points listed in the Daily Pre-ride Inspection Section.
- Perform the General lubrication procedure.


GAS GAS SPEEDO INSTRUCTIONS


The top button is the reset button.
The bottom button is the mode button.

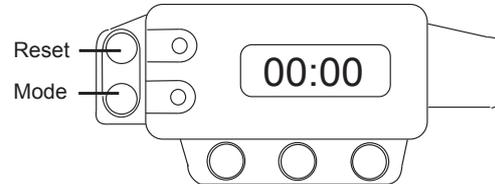

The initial display is the clock.(time) if you press mode (btm. button) the display goes:

1. Speedometer.
2. Speed (Km or miles).
3. Total distance in kmh or miles (this has a memory even if battery disconnected).
4. Trip distance.

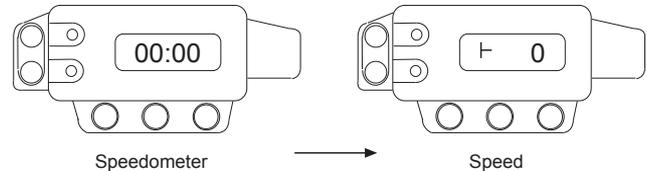

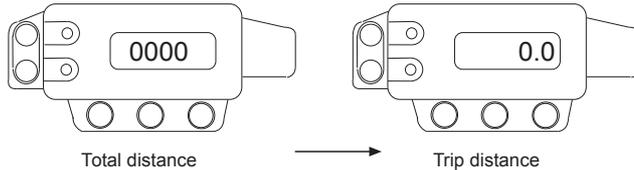

To change the time:

- Press mode until time display is shown.
- Press mode again keeping the button pressed the hour will display only add the hours by pressing the reset (top) button.
- Press mode again to adjust the minutes in the same way.
- Press mode again and the time is now set.

(when you have set the time the seconds automatically start from zero)

Trip distance:

- From time display press mode 3 times. (I- 0) to zero the trip , keep the reset button pressed until it zeros.

To change to kilometers per hour or miles per hour:

- Disconnect the battery. (the total distance will be saved).
- Re-connect the battery whilst holding down either button and it will read either;

| |
|------------------|
| met -- for km/h |
| mil --- for mp/h |

- The white plastic block connector on the speedo is for the display backlight.
- The red wire is positive.
- The black wire is negative.

- Warning; your speedo is set for the diameter of your front wheel

| | |
|-----------|-----|
| enduro | 21" |
| supermoto | 17" |

If you get the display to read "a 00" then you are in the rolling radius changing mode. you can "trim" the speed to run fast or slow. It ranges from "a-25" to "a 25".

NOTE

Standard setting is "a 00", we recommend you keep it at that.

TROUBLESHOOTING

NOTE

This is not an exhaustive list, giving every possible cause for each problem listed. It is meant simply as a rough guide to assist the troubleshooting for some of the more common difficulties.

| | TROUBLE | CAUSE | REMEDY |
|---|---|---|--|
| 1 | Engine doesn't crank | <ul style="list-style-type: none"> - Crankshaft seizure. - Cylinder-piston, connecting rod big end seizure. - Transmission set seizure. | <ul style="list-style-type: none"> - Go to specialized garage. - Go to specialized garage. - Go to specialized garage. |
| 2 | Engine cranks but doesn't start | <ul style="list-style-type: none"> - The motorcycle has been out of operation for a longer period of time. Therefore old fuel has accumulated in the float chamber. - Sooty or wet spark plug. - Flooded engine. - Fuel/ air mixture incorrect. | <ul style="list-style-type: none"> - Is recommended to drain the old fuel from the float chamber. - Clean and dry the spark plug or exchange it, respectively. - In order to "pump the engine free", pull de starter pedal 5 or 10 times. Then, start the engine as described above. If the engine fails to start, unscrew the spark pulug and dry it. - Clean tank cap air vent. Check by-pass throttle body. Check the air filter. |
| 3 | Engine start but stops few seconds ago. | <ul style="list-style-type: none"> - Incorrect air supply. - There isn't fuel. | <ul style="list-style-type: none"> - Close the starter. Clean fuel tank air vent. Check the air filter. - Fill up fuel tank. |
| 4 | Engine gets to hot | <ul style="list-style-type: none"> - Insufficient cooling liquid. - Radiators very dirty. | <ul style="list-style-type: none"> - Full up cooling liquid, check system refrigeration. - Clean radiators. |
| 5 | Engine flooded | <ul style="list-style-type: none"> - Spark plug dirty, or maladjusted. - Spark plug cap or high tension wiring trouble. | <ul style="list-style-type: none"> - Check spark plug, clean, adjust or replace. - Check spark plug cap, if it's damaged, change it. |

| | TROUBLE | CAUSE | REMEDY |
|----|---|---|---|
| 5 | Engine flooded | <ul style="list-style-type: none"> - Wiring shorted or open. - Water in fuel. | <ul style="list-style-type: none"> - Change wiring. - Empty fuel tank and fill up with new one. |
| 6 | Engine does not rev high, will not reach full power | <ul style="list-style-type: none"> - Fuel supply partially interrupted or carburettor dirty. - Dirty air filter. - Hose of engine ventilation is bent. - Main jet clogged. - Crankshaft bearing worn or damaged. - Clutch slipping. | <ul style="list-style-type: none"> - Clean and check fuel system as well as carburettor. - Clean and change the air filter. - Replace non-buckling ventilation hose. - Dismount carburetor and clean main jet. - Change crankshaft bearing. - Check clutch. Go to specialized garage. |
| 7 | Abnormal engine noise | <ul style="list-style-type: none"> - Starter problem. - Overheating. | <ul style="list-style-type: none"> - Go to specialized garage. - Look number 5. |
| 8 | Spark knock | <ul style="list-style-type: none"> - Carbon in combustion chamber. - Incorrect or poor gasoline. - Incorrect spark plug. - Connecting rod exhaust system damage. | <ul style="list-style-type: none"> - Clean combustion chamber. - Empty, and fill up with good gasoline. - Cambiar bujía por otra nueva o adecuada. - Check if the exhaust system is damaged. Connecting rods have to be perfect, if they aren't, change them. |
| 9 | Exhaust pipe get out white smoke. | <ul style="list-style-type: none"> - Cylinder head gasket leaking. - Gas valve passage maladjusted. | <ul style="list-style-type: none"> - Change cylinder head gasket leaking. Go to specialized garage. - Adjust gas valve passage. Go to specialized garage. |
| 10 | Exhaust pipe get out brown smoke. | <ul style="list-style-type: none"> - Air filter is bloked. - Main jet higher. | <ul style="list-style-type: none"> - Clean or change the air filter. Go to specialized garage. - Check main jet. Go to specialized garage. |
| 11 | Clutch not disengaging properly | <ul style="list-style-type: none"> - No clutch lever play maladjusted. - Friction plate worn or warped. - Steel plate worn or warped. - Gear lever damaged. - Clutch spring broken or weak. - Clutch release mechanism trouble. | <ul style="list-style-type: none"> - Go to specialized garage. - Change friction plate. - Go to specialized garage. - Change gear lever. - Check or change clutch spring. - Check clutch release mechanism. |

| | TROUBLE | CAUSE | REMEDY |
|----|---------------------------------|---|---|
| 11 | Clutch not disengaging properly | - Clutch hub or housing unevenly worn. | - Change clutch hub. |
| 12 | Jumps out of gear | - Shift fork worn, gear worn. - Gear dogs and/or dog holes worn. - Shift drum groove worn. - Gear positioning. - Lever spring weak or broken. | - Change it and go to specialized garage. - Change it and go to specialized garage. |
| 13 | Clutch slipping | - No clutch lever play, maladjusted. - Friction plate worn or warped. - Steel plate worn or warped. - Clutch spring broken or weak. - Clutch disc unevenly worn. | - Go to specialized garage. - Change friction plate and go to specialized garage. - Change steel plate. - Check or change clutch spring. - Change clutch disc. Go to specialized garage. |
| 14 | Stability Unsatisfactory | - Control cable routing incorrect. - Wiring routing incorrect. - Steering stem locknut too tight. - Steering stem bent. | - Move control cable or unscrew. - Unscrew wiring routing. - Change steering stem locknut. - Change and go to specialized garage. |
| 15 | Shock absorption too hard | - Front fork oil excessive. - Front fork oil viscosity too high. - Front fork leg bent. - Tire air pressure too high. - Rear shock absorber maladjusted. | - Empty and review level oil. - Empty oil from fork and go to specialized garage. - Change it. Go to a specialized garage. - Check tire air pressure. - Check rear shock absorber. |
| 16 | Shock absorption too soft | - Front fork oil insufficient and/ or leaking. - Front fork oil viscosity too low. - Front fork leg bent. - Tire air pressure too small. - Rear shock absorber maladjusted. | - Fill up until correct level. - Empty oil from fork and fill up with suitable viscosity oil. - Change front fork. Go to specialized garage. - Check tire air pressure. - Check rear shock absorber. |
| 17 | Abnormal train noise | - Drive chain adjusted improperly. - Chain worn. | - Adjust chain. - Change chain and rear engine sprocket. |

| | TROUBLE | CAUSE | REMEDY |
|----|--|--|---|
| 17 | Abnormal train noise | <ul style="list-style-type: none"> - Rear and/or engine sprocket worn. - Chain lubrication insufficient. - Rear wheel misaligned. - Oil front fork insufficient or too thin. - Spring weak or broken. - Disc brake worn. - Pad installed incorrectly or surface glazed. - Cylinder damaged. - Bracket, nut, bolt, etc. not properly mounted or tightened. | <ul style="list-style-type: none"> - Change it. - Lubricate with appropriate chain oil. - Align rear wheel. - Add oil until correct level. - Change spring. - Change disc brake. - Replace pad or change. - Change cylinder damaged. - Go to specialized garage. |
| 18 | Handlebar shakes or excessively vibrates | <ul style="list-style-type: none"> - Tire, swing arm sleeve or needle bearing damaged. - Rim warped. - Wheel misaligned. - Front/ rear axle runout excessive. | <ul style="list-style-type: none"> - Change it for new pieces. - Centre rim. - Check wheel rim pressure. Adjust if it is necessary. - Check rear/ front axle steering. Adjust if it's necessary. |
| 19 | Motorcycle pull to one side | <ul style="list-style-type: none"> - Frame bent. - Steering maladjusted. - Steering stem bent. - Front fork bent. - Wheel misalignment. | <ul style="list-style-type: none"> - Go to specialized garage. - Adjust steering. Go to specialized garage. - Change steering stem and go to specialized garage. - Change front fork. - Align wheel. |
| 20 | Brakes don't hold | <ul style="list-style-type: none"> - Pad or disc worn. - Brake fluid leak. - Brake fluid deteriorated. - Piston pump damaged. - Brake maladjustment. | <ul style="list-style-type: none"> - Change disc. - Check and replace. - Empty brake fluid and replace with new recommended one. - Replace pump piston. - Adjust brake. |
| 21 | Las lámparas se funden | <ul style="list-style-type: none"> - El regulador de la tensión están defectuosos. | <ul style="list-style-type: none"> - Dismount seat and fuel tank and check connections, have voltage regulator checked and fuse of box fuses. |
| 22 | El sistema de iluminación no funciona | <ul style="list-style-type: none"> - El fusible del relé de iluminación está fundido. | <ul style="list-style-type: none"> - Dismount seat and fuse box cover and replace fuse. |

WARRANTY REGULATIONS

Manufacturer's warranty

The Company GAS GAS Motos S.A. hereby warrants to the final purchaser of a vehicle manufactured by GG that both materials and workmanship are free from defects according to the corresponding state of the art. Accordingly, GG hereby warrants to the final purchaser (hereinafter referred to as the «purchaser»), subject to the conditions stated below, to remove any defects in material or production detected in a new motorcycle free of charge within the agreed period of warranty without any limitation whatsoever in terms of the number of kilometres travelled or the number of operating hours.

Period of warranty

The period of warranty shall commence on the day of delivery of the vehicle by a licensed GG dealer to the purchaser, or in the case of demonstration models, on the date on which the vehicle is put into operation for the first time.

The length of the warranty period depends on the type of vehicle and is stated in the document of delivery.

Any defects detected in the product shall be brought to the attention of a licensed GG dealer within the warranty period. If the last day of the warranty period is a Sunday or public holiday, the warranty period shall be extended in such a way that the last day of the warranty period is the next working day following the respective Sunday or public holiday. Warranty claims shall be excluded for any defects not brought to the attention of a licensed GG dealer by the end of the warranty period.

Obligation of the purchaser

GG shall be entitled to refuse to accept warranty claims if and to the extent that:

- a) The purchaser has failed to subject the vehicle to any of the inspections and/or maintenance work prescribed in the operating manual or has exceeded the date stated for such inspections or maintenance work, also excluding from the warranty defects that appeared before the prescribed date of such inspection or maintenance work performed not at all or performed only after the prescribed date.
- b) Inspection, maintenance work and repair work on the vehicle has been performed by a party neither recognized nor licensed by GG;
- c) Any maintenance or repair work has been performed on the vehicle in violation of the technical requirements, specifications and instructions indicated by the manufacturer.
- d) Spare parts not released for use by GG have been used to perform maintenance or repair work on the vehicle, or if and to the extent that the vehicle has been operated using other fuels, lubricants or operating fluids (including but not limited to cleaning agents) than those expressly stated in the specifications in the operating manual;
- e) The vehicle has been altered or modified in any way or equipped with other components than those expressly released by GG as admissible vehicle components.
- f) The vehicle has been stored or transported in a way that does not meet the corresponding technical requirements.
- g) The vehicle has been used for competitions, races or attempts at any record whatsoever.

Exclusion from warranty

The following items shall be excluded from warranty:

- a) wear and tear parts including, without limitation, sparks plugs, batteries, fuel filters, oil filter elements, driving chains, engine sprockets, rear sprockets, air filters, brake discs, brake pads, clutch discs, lamps, fuses, carbon brushes, footrest rubbers, tires, tubes, cables and other rubber components.

- b) Lubricants (e.g. oil, grease, etc.) and operating fluids (e.g. battery fluid, cooling liquid, etc.).
- c) Inspection, adjusting and other periodical maintenance work as well as all kinds of cleaning work.
- d) Damage to paint work and corrosion thereof due to external influences such as stones, salt, industrial exhaust gases and other environmental impacts or inadequate cleaning with inadequate products.
- e) Any consequential harms caused by defects as well as incidental expenses directly or indirectly related to defects (e.g. telecommunication charges, cost of board and lodging, cost of rental cars, public transport charges, cost of salvage and towing, overnight expenses, etc.) as well as other financial disadvantages (e.g. caused by loss of use of a motor vehicle, loss of earnings, loss of time, etc.).
- f) Any aesthetic or acoustic phenomena that does not significantly affect the serviceable condition of the motorcycle (e.g. hidden or minor blemishes, normal operating noise or vibrations).
- g) Phenomena due to the aging of the vehicle (e.g. fading of painted or metal-coated surfaces).

Miscellaneous

- 1.- GG shall be entitled to decide in its sole discretion whether to repair or to replace defective parts. The ownership of parts replaced, if any, shall pass to GG, free of any consideration whatsoever. The licensed GG dealer entrusted with the removal of defects shall not be authorized to issue binding declarations on behalf of.
- 2.- In cases of doubt regarding the existence of a defect or if a visual inspection or material testing is required, GG shall be entitled to demand submission of the parts for which warranty claims are put forward or to order an examination of the defect by a GG expert. Any additional warranty obligations for parts replaced free of charge or for any service performed free of charge under the present warranty shall be excluded. The warranty components replaced within the warranty period shall end at the date of expiry of the warranty period agreed for the respective product.

- 3.- If it turns out that any defect cannot be removed, the warranty shall be entitled to demand termination of the contract (payment of a compensation) or partial reimbursement for the purchasing price (discount) instead of repair of the motorcycle.

The warranty shall in no case be entitled to receive a new motorcycle as a substitute for the defective product.

- 4.- The warranty claims of the purchaser under the contract of purchase and sale concluded with the respective licensed dealer shall not be affected by the present warranty. Neither shall the present warranty affect any additional contractual rights of the purchaser under the General Business Conditions of the licensed dealer. However, such additional rights can only be claimed against the licensed dealer.

- 5.- If the purchaser resells the product within the warranty period, the terms and conditions of the present warranty shall continue to exist in their present scope, the right to put forward claims under the present warranty according to the terms and conditions hereof will be passed on to the new owner of the motorcycle.

February 2003



GAS GAS

FEBRERO / FEBRUARY 2003

C/ UNICEF nº 17 · Poligon Industrial Torremirona · 17190 Salt (Girona) SPAIN · Tel: +34 902 47 62 54 Fax: +34 902 47 61 60
E-mail: officegg@gasgasmotos.es / partsgg@gasgasmotos.es · Web: www.gasgasmotos.es